



# 2025 OPERATOR'S MANUAL



**Xplorer XR 700 EPS  
Xplorer XR 700 LE**

*This vehicle is not a toy. Never allow anyone under  
16 years of age to operate this ATV.*

# NOTE

Read this manual before you operate your ARGO ATV. It contains safe operating instructions and warns the user about potential hazards that can result in personal injury.

Warnings are identified in the text by the following symbol:



## WARNING

Warning text warns the user about potential hazards that can result in personal injury or death.

Cautions are identified in the text by the following symbol:



## CAUTION

Caution text contains cautions that can prevent damage to the ATV.

This manual is based on the latest product information available at the time of printing. ARGO reserves the right to make changes at any time and without obligation.

Reproduction of any part of this publication is prohibited without prior written permission.

© 2024 ARGO



## WARNING

## CALIFORNIA PROPOSITION 65

WARNING: This product may contain fuels, oils and fluids, battery posts, terminals and related accessories which contain lead and lead compounds and other chemicals identified by the State of California to potentially cause cancer, birth defects, and other reproductive harm. These chemicals are found in vehicles, vehicle parts and accessories, both new and replacements. During maintenance, these vehicles generate used oil, waste fluids, grease, fumes and particulates, all identified by the State of California to potentially cause cancer, birth defects, and other reproductive harm.

For more information go to:

**[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

## PREFACE

This manual describes the controls, operation and basic maintenance procedures for the ARGO ATV from date of printing. Please take the time to read this manual carefully, for your safety and that of others. By following these instructions, you will ensure extended, trouble free operation of your ATV.

Before you drive your ARGO ATV, make sure you understand how to use all controls, particularly the brakes and steering system. Learn how to drive your ATV in an open level area, away from buildings, trees and other obstacles, until you are completely familiar with its operating characteristics. Drive very slowly until your driving skills improve, and drive with caution and consideration at all times. The risk of accident or injury is greatest during the first weeks of use. Take special care during this period. ALWAYS RESPECT OUR ENVIRONMENT.

### CAUTION TO THE ARGO OWNER/OPERATOR:

Before you operate your new ATV, we highly recommend these important points:

- Read your Operator's Manual.
- Never allow anyone under 16 years of age to operate this ATV.
- Take the training course before operating your ATV, ask your dealer for more information.
- This ATV is designed for one person only.
- This Operator's Manual is provided to make the operator aware of proper operating procedures. It also includes useful information related to general care and maintenance of your ATV.
- Prior to any ATV operation, it is absolutely essential to read and comprehend each section in this manual as well as watch the safety video provided with your ATV to develop an understanding of your ATV and to ensure your safety. After reviewing this manual and watching the safety video, store them in a dry and easily accessible place for future reference.
- This manual is designed to help familiarize you with safety, assembly and operation. Read this manual and follow the recommendations to help ensure safe and efficient operation.
- The information contained within this manual was current at the time of printing. Constant improvement in the design and quality of components may result in discrepancies between the actual ATV and information presented in this manual.
- To view the most up-to-date manuals or to order a replacement Operator's Manual, please contact an authorized dealer or visit the ARGO website.
- This manual has been prepared to instruct you in the safe and responsible operation of your ATV. Read and abide by all safety alert information about this ATV. If you do not understand any part of this manual, contact your local dealer for additional information and clarification. As the operator of this ATV, you are in complete control. Only you can prevent an accident from happening.
- Right-hand and left-hand, as used in this manual, are determined by facing the direction the ATV will travel while in use unless otherwise stated.
- Never modify the vehicle in any way that will alter the weight distribution of the vehicle, decrease its stability or increase the speed beyond the factory specifications. Such modifications can cause serious personal injury or death. The manufacturer prohibits and disclaims responsibility for any such modifications or any other alteration which would adversely affect the safety of the vehicle. The vehicle manufacturer reserves the right to incorporate engineering and design changes to products in this manual, without obligation to include these changes on units sold previously. The information contained in this manual may be revised periodically by the manufacturer, and therefore is subject to change without notice.

# TABLE OF CONTENTS

## **SECTION 1 - Introduction**

Introduction.....	1
Getting Acquainted With Your ATV .....	4

## **SECTION 2 - Safety Information**

Safety Information .....	7
Warnings .....	12
Hangtags and Warning Labels .....	21

## **SECTION 3 - Specifications**

Specifications .....	25
----------------------	----

## **SECTION 4 - Description and Identification**

Identification Number Records .....	27
Frame and Engine Serial Number .....	27
Location of Parts and Controls .....	28
Control Functions	
Ignition Switch .....	30
Instruments and Indicators .....	30
Left Handlebar Switches	
Headlight Dimmer Switch .....	32
Engine Start Switch .....	32
Emergency Stop Switch .....	32
Right Handlebar Switches	
2WD / 4WD Switch .....	33
Differential Lock Switch .....	33
Throttle Lever .....	34
Speed Limiter .....	34
Brakes	
Left Hand Brake Lever.....	35
Parking Brake Lock .....	35
Foot Brake Pedal.....	36
Transmission Ranges.....	36
Fuel Tank Cap .....	37
Seat Removal.....	37
Seat Installation .....	38
Safety Flag Bracket .....	38
Storage Compartment .....	38
Accessory Plug.....	39
Fuses.....	39
Tool Kit.....	39

## **SECTION 5 - Getting to Know Your ATV**

Getting to Know Your ATV .....	41
Before Riding.....	41
Rider Preparation - Age Requirement .....	41
Pre-Operation Checks .....	41

Safe Riding Rules.....	41
Protective Apparel .....	41
Weight Limits .....	42
Accessories .....	42
No Modifications .....	42
For Off-Road Use Only.....	42
Environment .....	42
Weather .....	42
Terrain.....	43
Night Riding .....	43
Paved Surfaces .....	43
Trail Riding .....	43
Turning Your ATV.....	44
Leaning, Weight Shift and Balance .....	44
Wide Turns .....	44
Sharp Turns .....	45
Quick Turns .....	45
K-Turns.....	46
Climbing Uphill.....	47
Never Operate Up or Down Hills Steeper than 25° .....	47
Riding Downhill.....	48
Crossing A Slope .....	48
Swerving.....	49
Riding Over Rough Terrain .....	49
Crossing Through Shallow Water.....	50
Sliding or Skidding.....	51
Crossing Roads .....	51
Cold Weather Operation.....	51
Braking .....	52
Reversing .....	52
Parking .....	53
Parking On A Slope .....	53
Stopping the Engine .....	53
Trailering and Towing.....	54
Transporting Your ATV.....	55
What To Do If .....	56

## **SECTION 6 - Before You Ride**

Engine Break-In.....	57
Pre-Operation Checks .....	57
Front and Rear Hydraulic Brakes .....	59
Fuel.....	59
Engine Coolant Reservoir.....	60
Coolant Level Inspection .....	60
Engine Oil.....	61
Engine Oil Level Inspection .....	61
Rear Gear Case Oil Inspection.....	62
Front Gear Case Oil Inspection .....	63
Throttle Lever .....	64
Fittings and Fasteners .....	64
Lights.....	64

Switches .....	64
Tires.....	64
How to Measure Tire Pressure .....	64
Tire Wear Limit .....	65

## **SECTION 7 - Operation**

Mounting the ATV .....	67
Starting the Engine .....	67
Warming up Engine .....	68
Braking / Stopping .....	68
Shifting.....	69
Parking .....	69
Dismounting the ATV .....	69

## **SECTION 8 - General Maintenance**

General Maintenance .....	71
Maintenance Schedule .....	72
Radiator .....	73
Shock Absorbers .....	73
Cables .....	74
Engine Oil Level Inspection .....	74
Engine Oil and Oil Filter Change .....	74
Rear Gear Case Oil Inspection.....	76
Rear Gear Case Oil Change .....	76
Front Gear Case Oil Inspection .....	77
Front Gear Case Oil Change.....	77
Drive Select Lever Adjustment .....	78
Hydraulic Brake .....	79
Brake Fluid .....	79
Rear Foot Brake .....	80
Brake Hoses .....	80
Front / Rear Brake Pads.....	80
Protective Rubber Boots.....	82
Ball Joint Boots (Upper/Lower and Left/Right) .....	82
Tie Rod Boots (Inner/Outer and Left/Right).....	82
Drive Axle Boots .....	83
Wheel Removal .....	83
Wheel Installation .....	84
Battery .....	84
Battery Capacity .....	85
Charging / Maintenance Charging .....	86
Jump-Starting .....	87
Spark Plug .....	87
Throttle Cable Adjustment .....	88
Air Filter .....	88
Air Filter Housing Drain .....	90
Draining the V-Belt Cover .....	90
Tires.....	91
Tire Replacement .....	91

Muffler / Spark Arrester..... 91  
Light Bulb Replacment ..... 92  
Headlight ..... 93  
Checking / Adjusting Headlight Aim..... 93  
Taillight / Brakelight..... 94  
Fuses..... 94  
Noise Regulation ..... 95  
Troubleshooting ..... 97

**SECTION 9 - Preparation For Storage**

Preparation For Storage..... 99

**SECTION 10 - Warranty**

Limited Warranty ..... 101  
Emissions Warranty..... 103  
  
Maintenance Record ..... 105

## **SECTION 1**

### **Introduction**

ARGO welcomes you to its growing family of new product owners. This All-Terrain Vehicle (ATV) has been designed with care and built by skilled workers using quality materials.

Proper setup, maintenance and safe operating practices will help you get years of satisfactory use from this ATV.

Your safety and the safety of all ARGO users is of the greatest concern to us. You will find numerous safety statements in this manual. Please read and follow them carefully. Always be safety conscious when you operate your ARGO and remember it is a motorized vehicle.

Please take the time to develop your driving skills before attempting new challenges. Observe the recommendations outlined in this Operator's Manual and remember; some things are just impossible, even with an ARGO.

***WELCOME TO THE WORLD WIDE ARGO FAMILY!***





## **Introduction**

Thank you for choosing this quality ARGO ATV. It has been designed and manufactured to provide you with reliable and enjoyable operation. This Operator's Manual should be considered a permanent part of your ATV and must remain with the ATV in the event of a resale.

This manual was prepared to provide you with the information required to operate and maintain your ATV. This manual also covers rider-related instructions, as well as service and storage instructions. If your ATV ever requires repair or service, contact an authorized ARGO ATV dealer for professional service.

As the owner and rider of an ARGO ATV, you should become thoroughly familiar with your ATVs basic operation, maintenance and storage procedures. Please read and understand the entire Operator's Manual before operating your ARGO ATV to ensure safe and proper use. Always operate your ATV within your level of skill and current terrain conditions.

At the time of publication, all of the information and illustrations in this manual are technically correct. Some illustrations herein are used to best represent a certain procedure or item and are not intended to depict actual conditions. Because ARGO is constantly refining and improving its products, there may be differences between the vehicle images and the text depicted in this manual and your ATV. As such, no retroactive obligation to the product is available.

## **REPLACEMENT PARTS, ACCESSORIES and SERVICE**

- Most replacement parts and accessories are typically available from your dealer. For immediate availability and convenience, it is recommended items be ordered from an authorized dealer. Take this manual and all supplements to the dealer when ordering parts in person.
- Orders may be subject to a minimum fee. A listing of authorized service providers in your area is also available on the website.
- Unapproved installation of parts or accessories can create a substantial safety hazard and increase the risk of personal injury.
- Use authorized parts only.

### **Precautionary Measures**

#### ***Protect Your Sport***

- Know all State and local laws relating to ATV riding,
- Respect your ATV
- Respect the environment, and
- You will gain the respect of other fellow riders.

**PLEASE TAKE A FEW MOMENTS TO GET ACQUAINTED  
WITH YOUR ATV BY READING THIS OPERATOR'S MANUAL**

**NOTE:**

The manufacturer **DISCLAIMS LIABILITY FOR ERRORS IN THIS MANUAL**, and **SPECIFICALLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES** resulting from the use of the information and material in this manual.

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

Purchase Date (mm/dd/yyyy): \_\_\_\_\_

Model: \_\_\_\_\_

Frame Number: \_\_\_\_\_

Engine Number: \_\_\_\_\_

Key Number: \_\_\_\_\_

- Before operating this ATV, the owner and each operator must understand that this ATV was not designed or manufactured to meet specifications for use on public roads, streets, highways or thoroughfares.
- The owner and operator(s) must read and understand all the instructions for proper assembly and safe operation, as well as the instructions concerning the engine and all other portions of the ATV, as described and illustrated in this manual.
- This ATV is **NOT** to be operated by anyone under 16 years of age.
- This ATV is **NOT** a toy.
- Be sure to follow the recommended maintenance schedule and service your ATV accordingly.

**PREVENTATIVE MAINTENANCE IS EXTREMELY IMPORTANT  
TO THE SAFE OPERATION AND LONGEVITY OF YOUR ATV**

We advise you to follow the recommended maintenance program as outlined in this manual. This program is designed to ensure all critical components on this ATV are thoroughly inspected at specified intervals.

## GETTING ACQUAINTED WITH YOUR ATV

This manual will provide you with a good basic understanding of the features and operation of this ATV. This manual includes important safety information. It provides information about special techniques and skills necessary to ride the ATV. It also includes basic maintenance and inspection procedures. If you have any questions regarding the operation or maintenance of your ATV, please consult dealer.

### IMPORTANT SAFETY MESSAGE:

- The Consumer Product Safety Commission has concluded that ALL-TERRAIN VEHICLES (ATVs) may present a risk of DEATH or SEVERE INJURY in certain circumstances. While accidents may occur for many reasons:
    - As of September, 2022 the year 2019 is the most recent year of reporting for fatalities that CPSC considers complete. CPSC is aware of 1,513 people, including many children, have died in accidents associated with ATVs during a 3-year period from 2017 through 2019.
    - Many people have become severely paralyzed or suffered severe internal injuries as a result of accidents associated with ATVs.
    - Every month, thousands of people are treated in hospital emergency rooms for injuries received while riding an ATV.
  - **You should be aware that AN ATV IS NOT A TOY AND CAN BE HAZARDOUS TO OPERATE.** An ATV handles differently from other vehicles, including motorcycles and cars. A collision or rollover can occur quickly, even during routine maneuvers such as turning and driving on hills and over obstacles, if you fail to take proper precautions.
    - Read this manual carefully and completely before operating your ATV. Make sure you understand all instructions.
    - For Type 1 ATVs, Category G (General Use) ATV. An ATV intended for recreational and/or utility use by an operator age 16 or older.
    - Pay attention to the warning and notice labels on the ATV.
    - Never operate an ATV without proper training or instruction. For a training course, please consult a dealer or visit [argoxtv.com](http://argoxtv.com) for a link to RIDER SAFETY.
    - This ATV is designed for a single rider, do not carry a passenger.
    - This ATV is designed exclusively for off-road use. It is not designed, properly equipped or licensed to be safely operated on public streets and highways.
    - This ATV complies with all applicable off-road noise level and spark arrester laws and regulations in effect at the time of manufacture.
    - Please check your local riding laws and regulations before operating this ATV.
    - For your safety, follow and understand all CAUTIONS, WARNINGS and LABELS contained in this Operator's Manual.
    - For your safety, watch the safety video provided with your ATV.
    - Keep this Operator's Manual with your ATV at all times for reference.
- FAILURE TO FOLLOW THE WARNINGS and CAUTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SERIOUS INJURY OR DEATH.**

### IMPORTANT

Operate this ATV with safety constantly in mind. Off-road vehicles face unpredictable and often hazardous terrain conditions. It is ultimately the operator's responsibility to handle the ATV safely within its limitations and to decide when and where to travel.

**FOR MORE INFORMATION ON OUR FULL PRODUCT OFFERING, VISIT OUR WEBSITE [www.argoxtv.com](http://www.argoxtv.com)**

- For a detailed description of warranty coverage for your ATV, refer to the Warranty section found in this Operator's Manual or visit our website.
- For a detailed description of the emissions warranty for your ATV, refer to the Emissions Warranty section of this Operator's Manual or visit our website.

***ARGO WANTS YOU TO BE SATISFIED WITH YOUR NEW ATV. IF YOU DO NOT UNDERSTAND ANY PART OF THIS MANUAL OR ARE NOT SATISFIED WITH THE SERVICE RECEIVED, PLEASE TAKE THE FOLLOWING ACTIONS:***

Discuss the matter with your dealership service manager. Make sure they are aware of any problems so they can assist you.



**WARNING**

All engine exhaust contains carbon monoxide, a deadly gas. Carbon Monoxide is a colorless, odorless, tasteless gas, which may be present even if you do not see or smell any engine exhaust.

**Avoid Carbon Monoxide Poisoning.**

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through opening such as windows and doors.

## NOTES

## SECTION 2

### Safety Information

#### An ATV is NOT a Toy and Can Be Hazardous To Operate

An ATV handles differently from other vehicles such as motorcycles and cars. A collision or rollover can occur quickly, even during routine operation such as turning, driving over obstacles, on hills or rough terrain, if you do not take necessary precautions.

SEVERE INJURY OR DEATH can result if you do not follow these instructions:

- Read this manual and all CAUTION/WARNING labels carefully and follow the operating procedures described.
- Never operate an ATV without proper instruction. Take a training course. Beginners should receive training from a certified instructor. Contact the ATV Safety Institute at: U.S. - 1-800-887-2887 or Canada - 1-613-739-1535 to find out about a training course nearest you. Visit [www.atvsafety.org](http://www.atvsafety.org) to register for free ATV safety training. ARGO is offering a \$100 incentive for completion of the ASI approved safety training.
- \* FOR MORE INFORMATION ABOUT ATV SAFETY in the United States, call the Consumer Product Safety Safety Commission at 1-800-638-2772 or visit [www.cpsc.gov](http://www.cpsc.gov) or visit [www.atvsafety.org](http://www.atvsafety.org).
- Never allow anyone under 16 years of age to operate this ATV.
- Never carry a passenger.
- Never permit a guest to operate this ATV unless the guest has read this manual and all product labels and has completed the training course.
- Never operate an ATV on any paved surfaces, including sidewalks, driveways, parking lots, and streets.
- Never operate this ATV on any public street, highway, or road (dirt or gravel).
- Never operate an ATV without wearing an approved helmet that fits properly. You should also wear eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket, and long pants.
- Never consume alcohol or drugs before or while operating this ATV.
- Never operate at excessive speeds. Always travel at a speed which is proper for the terrain, visibility and operating conditions, and your experience.
- Never attempt wheelies, jumps, or other stunts.
- Always inspect this ATV each time you use it to make sure it is in safe operating condition. Always follow the inspection, maintenance procedures and schedules described in this manual.
- Always keep both hands on the handlebars and both feet on the footrests of the ATV during operation.
- Always go slow and use caution when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating the ATV.
- Never operate the ATV on hills too steep for the abilities of the operator or the ATV. Practice on smaller hills before attempting larger hills.
- Never operate on excessively rough, slippery, or loose terrain.
- Always follow proper procedures for turning as described in this manual. Practice turning at slow speeds before attempting to turn at faster speeds. Do not turn at excessive speed.
- Always have the ATV inspected by an authorized ARGO dealer if it has been involved in any type of accident.
- NEVER OPERATE UP OR DOWN HILLS STEEPER THAN 25 DEGREES

## **An ATV is NOT a Toy and Can Be Hazardous To Operate**

- Always follow proper procedures for climbing hills as described in this manual. Check the terrain carefully before you start up any hill. Never climb hills with slippery or loose surfaces. Shift your weight forward. Never accelerate suddenly. Never go over the top of any hill at a high rate of speed.
- Always follow proper procedures for going down hills and for braking on hills as described in this manual. Check the terrain carefully before you start down any hill. Shift your weight towards the back of the ATV. Never go down a hill at a high rate of speed. Avoid going down a hill at an angle which would cause the ATV to lean sharply to one side. Go straight down the hill whenever possible.
- Always follow proper procedures for crossing the side of a hill as described in this manual. Avoid hills with slippery or loose surfaces. Shift your weight to the uphill side of the ATV. Never attempt to turn the ATV around on any hill until you have mastered the turning techniques described in this manual on level ground. Avoid crossing the side of a steep hill if possible.
- Always use proper procedures if you stall or roll backward when climbing a hill. To avoid stalling, maintain a steady speed when climbing a hill. If you stall or roll backwards, follow the special instructions for braking described in this manual. Dismount the ATV on the uphill side or to either side if pointed straight uphill. Turn the ATV around and mount the ATV following the special instructions described in this manual.
- Always check for obstacles before operating in a new area.
- Never attempt to operate over large obstacles, such as large rocks or fallen trees. Always follow proper procedures when operating over obstacles as described in this manual.
- Always use caution when skidding or sliding. On slippery surfaces, such as ice, go slow and be very cautious in order to reduce the chance of skidding or sliding out of control.
- Never operate an ATV in fast flowing water or in water deeper than the footrests. Remember that wet brakes may have reduced stopping capability. Test your brakes after exiting any water. If necessary, apply the brake lightly several times to let friction dry out the pads.
- Always use the size and type of tires specified in this manual.
- Always maintain proper tire pressure as described in this manual.
- Never improperly install or improperly use accessories on your ATV.
- Never exceed the stated load capacity for this ATV.

## **An ATV is NOT a Toy and Can Be Hazardous To Operate**

### **IMPORTANT MESSAGE**

**Your safety is very important to ARGO.** That is why we urge you to read this message before you operate this ATV. Off-road riding can be fun. However, an ATV is not a toy and it can be hazardous to operate. As with any activity involving speed and skill such as bicycling or skateboarding, poor judgment can result in injuries and we don't want that to happen! You can help prevent accidents by making good decisions about if, when, and how you ride this ATV.

### **Evaluate Riding Readiness**

The first decision you'll need to make is whether you're ready to ride. Riding readiness varies widely from one person to another, and while the minimum age for this ATV is 16 years of age, there are other factors that you should consider.

**Physical size and ability** are important considerations. To help determine whether a rider is big enough for this ATV, stand up on the footboards and grasp the hand grips. While holding this position, ensure you have at least three inches (8cm) of clearance between the ATV seat and the rider's "seat of the pants". At least three inches (8cm) of clearance is needed so you can stand up for balance and comfort, and to shift your body forward, backward and from side to side.

Also make sure you can comfortably reach and operate all the controls. For example, can you turn the handlebars all the way to the right and left? Can you operate the throttle and brake levers while holding onto the hand grips? If not, you are not physically ready to ride this ATV.

Before you operate an ATV, decide whether you are physically, mentally and emotionally ready to ride.

### **Patience And Practice**

Even if you take a certified training course, it's up to you to ensure your safety. Remember, learning to ride a ATV is a gradual step-by-step process. It takes time, patience and practice.

To help you regulate your rate of learning, your ATV was delivered with an **adjustable throttle limiter**. The limiter may be adjusted to reduce the maximum speed of the ATV. For adjustment and removal instructions, see page 34.

### **Personal Choices**

A safe, enjoyable ATV ride is dependent on many personal choices. An ATV, like all motorized vehicles, can be dangerous to operate if you choose to ignore safety precautions, take unnecessary chances, or ride beyond your ability or your ATVs capability. Don't allow the thrill of freedom or adventure to affect your ability to make good, safe choices.





## **An ATV is NOT a Toy and Can Be Hazardous To Operate**

### **Always Supervise Inexperienced Riders**

Supervision is another important obligation of the owner. Even after riders become skilled off-road riders, it also helps to regularly remind all riders to follow the instructions and warnings in this manual. And remember, it's the owner's responsibility to see that the ATV is properly maintained and kept in safe operating condition.

If you choose to lend your ATV to another rider, make sure the rider is 16 years old or older and has completed the safety training course. You should understand that the decision to lend the ATV is yours.

### ***Use the below safety gear before operation:***

#### **Clothing and Gear**

While riding your ATV, you will find it important to dress correctly to prevent personal injury. Below is the minimum protection recommended to wear during every ride:

1. Helmet
2. Eye Protection
3. Long Pants
4. Long Sleeve Shirt
5. Gloves
6. Boots/Ankle Protection

#### **Helmet**

There are many different types and styles of helmet to choose from today. Be sure to choose a helmet that complies with the current standards of the U.S. Department of Transportation (DOT), The Snell Memorial Foundation, or the American National Standards Institute (ANSI). Helmets that comply with one or more of the above standards have a defined label located on the inside or outside of the helmet.

These helmets should provide full-face protection.

If you damage your helmet, obtain a new one immediately.

Remember: Your helmet is not providing any safety if the chin strap is not securely fastened.

#### **Eye Protection**

Wear eye protection, such as goggles, to completely surround your eyes to prevent any dirt or other items from getting into your eyes. Sunglasses are not a form of protection as they are open on the sides.

#### **Long Pants and Long Sleeve Shirt**

Protection from sticks, branches, long grass, airborne objects, or anything that could possible scrape your skin. The heavier the material, the better the protection.

#### **Gloves**

Gloves will provide protection to your hands from any debris or incimate weather. Choose a glove that provides a gripping surface as well as protection.

## **An ATV is NOT a Toy and Can Be Hazardous To Operate**

### **Boots/Ankle Protection**

Choose a boot that protects the largest possible of your leg (preferable up to your knee) and can handle impact of rocks, dirt or branches. Choose a boot that has low heel and a good tread will help prevent your feet from slipping off the footrests in wet or rugged conditions.

### **First Aid and Survival**

Prepare for the unexpected. Emergencies and accidents happen and are ever worse when you are not prepared for them. Below is a recommended list of items you should have before every ride:

#### **1. Tools**

Routine maintenance will generally eliminate the need for emergency repairs during your ride. Riding on rough terrain could cause some fasteners to loosen. Carrying the right tools can prevent down time. Below is a recommended list of tools to carry on your ride:

- a. Spark plug
- b. Spare parts
- c. Rope
- d. Tool kit
- e. Duct tape
- f. Headlight/Taillight bulbs

#### **2. Water**

Water is an important part of your ride regardless of the duration. Heat exhaustion and heat stroke can suddenly shorten your ride. If you become dehydrated, you may find yourself unable to safely operate your ATV.

#### **3. Identification**

If something happens to you while operating your ATV, emergency personnel will need to know who you are and who to call in the event of an emergency. It may be possible, you are unable to provide that information due to injury. Put identification in your pocket before you ride.

#### **4. First Aid Kit/ Emergency Kit with Flashlight**

Several items are recommended in your Emergency Kit including a *Flashlight*; *Matches* in the event you need to start a fire; *Flares* for signaling help; *First Aid Kit* to include bandages, tape, gauze, antiseptic spray, etc. if an injury should occur; *Money*.

**5. Communication device** - it may be necessary to make an urgent phone call.

#### **6. Map/GPS**

## Warnings



### WARNING

#### POTENTIAL HAZARD

Failure to follow the age recommendations for this ATV.

#### WHAT CAN HAPPEN

If children use ATVs that are not recommended for their age, severe injury or death can result.

Even though a child may be within the age group for which an ATV is recommended, he or she may not have the skills, abilities, or judgment needed to operate the ATV safely and may be involved in a serious accident.

#### HOW TO AVOID THE HAZARD

Never allow anyone under 16 years of age to operate this ATV.  
Never allow continued use of the ATV if he or she does not have the abilities to operate it safely.



#### POTENTIAL HAZARD

Operating this vehicle without proper instruction.

#### WHAT CAN HAPPEN

The risk of an accident is greatly increased if the operator does not know how to operate this vehicle properly in different situations and on different types of terrain.

#### HOW TO AVOID THE HAZARD

All operators of this vehicle must read and understand this Operator's Manual and all warning and instruction labels prior to operating this vehicle.

#### POTENTIAL HAZARD

Operating this ATV on paved surfaces.

#### WHAT CAN HAPPEN

The ATV tires are designed for off-road use only and are not for use on pavement. Paved surfaces may seriously affect the handling and control of the ATV and may cause the ATV to go out of control.

#### HOW TO AVOID THE HAZARD

Whenever possible, avoid operating the ATV on any paved surfaces including streets, parking lots, sidewalks, and driveways. If operating on paved surfaces is unavoidable, travel slowly (less than 10 mph) and avoid sudden turns and stops.



### WARNING

Indicates a potential hazard that could result in a serious injury or death.

# Warnings

## **POTENTIAL HAZARD**

Carrying a passenger on this ATV.

## **WHAT CAN HAPPEN**

Greatly reduces your ability to balance and control this ATV. Could cause an accident, resulting in personal injury or death to you and/or your passenger.

## **HOW TO AVOID THE HAZARD**

Never carry a passenger. The longer seat is to allow the operator to shift positions as needed during operation.



## **POTENTIAL HAZARD**

Operating this ATV on public streets, roads, or highways.

## **WHAT CAN HAPPEN**

You can collide with another vehicle.

## **HOW TO AVOID THE HAZARD**

Never operate this ATV on any public street, road, or highway, even a dirt or gravel one. In many states it is illegal to operate an ATV on public streets, roads, or highways.



## **POTENTIAL HAZARD**

Operating this ATV after or while consuming alcohol or drugs.

## **WHAT CAN HAPPEN**

Can seriously affect your judgment.  
Can cause you to be slow to react.  
Can affect your balance and perception.  
Can result in an accident.

## **HOW TO AVOID THE HAZARD**

Never consume alcohol or drugs before or while operating this ATV.



## **POTENTIAL HAZARD**

Failure to inspect the ATV before operation.  
Failure to properly maintain the ATV.

## **WHAT CAN HAPPEN**

Increases the possibility of an accident or equipment damage.

## **HOW TO AVOID THE HAZARD**

Always inspect the ATV every time you use it. Ensure it is safe operating condition.  
Always follow the inspection and maintenance procedures and schedules described in this Operator's Manual.



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.

# Warnings

## **POTENTIAL HAZARD**

Operating this ATV without wearing an approved motorcycle helmet, eye protection, and protective clothing.

## **WHAT CAN HAPPEN**

Operating without an approved helmet increases your chances of a severe head injury or death in the event of an accident.

Operating without eye protection can result in an accident and increases your chances of a severe injury in the event of an accident.

Operating without protective clothing increases your chances of severe injury in the event of an accident.

## **HOW TO AVOID THE HAZARD**

Always wear an approved helmet that fits properly.

You should also wear:


Eye protection (goggles or face shield)

Gloves

Boots

Long sleeved shirt or jacket

Long pants

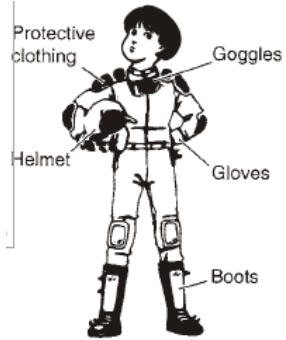

## **POTENTIAL HAZARD**

Operating this ATV at excessive speeds.

## **WHAT CAN HAPPEN**

Increases the chance of losing control of the ATV, which can result in an accident.

## **HOW TO AVOID THE HAZARD**

Always operate at a speed that is proper for the terrain, visibility, operating conditions, and your age and experience.

## **POTENTIAL HAZARD**

Failure to use caution when operating this ATV on unfamiliar terrain.

## **WHAT CAN HAPPEN**

You may encounter hidden rocks, bumps, or holes without enough time to react.

Could result in the ATV going out of control.

## **HOW TO AVOID THE HAZARD**

Use caution when operating on unfamiliar terrain. Always be alert to changing terrain conditions.



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.

## Warnings

### POTENTIAL HAZARD


Attempting wheelies, jumps and other stunts.

### WHAT CAN HAPPEN

Increases the chance of losing control of the ATV, which can result in an accident.

### HOW TO AVOID THE HAZARD

Never attempt stunts, such as wheelies or jumps. Don't try to show off.

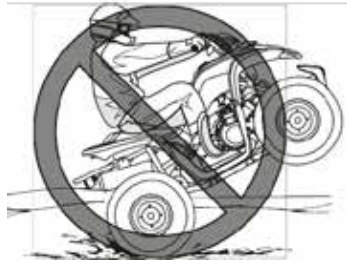

### POTENTIAL HAZARD

Failing to keep hands on handlebars or feet on footrests during operation.

### WHAT CAN HAPPEN

Removing even one hand or foot can reduce your ability to control the ATV or could cause you to lose your balance and fall off the ATV. If you remove a foot from the footrest, your foot or leg may come into contact with the wheels, which could cause personal injury or cause an accident.

### HOW TO AVOID THE HAZARD

Always keep both hands on the handlebars and both feet on the footrests during operation.



### POTENTIAL HAZARD

Improper handling of gasoline.

### WHAT CAN HAPPEN

Gasoline can ignite and you could be burned. Gasoline is poisonous and can cause injury.

### HOW TO AVOID THE HAZARD

Always turn off the engine when refueling.  
Do not refuel right after the engine has been running and is still very hot.  
Do not spill gasoline on the engine or exhaust pipe/muffler when refueling.  
Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.

**Never Operate Up or Down Hills  
Steeper than 25°**

**25° MAX**



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.

# Warnings

## POTENTIAL HAZARD

Operating on steep hills.

## WHAT CAN HAPPEN

This ATV can overturn more easily on steep hills than on level surfaces.

## HOW TO AVOID THE HAZARD

Never operate this ATV on hills too steep for the ATV or for your abilities. Practice on smaller hills before attempting larger hills.

## POTENTIAL HAZARD


Failure to use caution when operating this ATV on rough, slippery, or loose terrain.

## WHAT CAN HAPPEN

You may lose traction or control, which could result in an accident.

## HOW TO AVOID THE HAZARD

Do not operate this ATV on rough, slippery, or loose terrain until you have learned and practiced the skills necessary to control this ATV on such terrain.

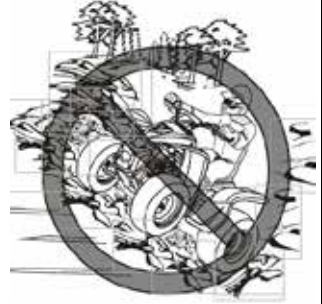

## POTENTIAL HAZARD

Climbing hills improperly.

## WHAT CAN HAPPEN

You may lose control, which could result in an accident.

## HOW TO AVOID THE HAZARD

Always follow proper procedures for climbing hills.

Always check the terrain carefully before you start up any hill.

Never climb hills with slippery or loose surfaces.

Shift your weight forward.

Never open the throttle suddenly. The ATV may flip over backwards.

Never go over the top of any hill at high speeds. An obstacle, sharp drop, or another vehicle or person may be on the other side.



## POTENTIAL HAZARD

Failure to use caution in turns; turning too sharp or aggressive.

## WHAT CAN HAPPEN

You may lose control, which could result in an accident.

## HOW TO AVOID THE HAZARD

Always follow proper procedure for turning. Practice turning at slower speeds before attempting to turn at faster speeds. Do not attempt to turn at excessive speeds or too sharp for the conditions and for your experience level.



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.

## Warnings

### **POTENTIAL HAZARD**

Going down a hill improperly.

### **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

### **HOW TO AVOID THE HAZARD**


Always follow proper procedures for going down hills.

Always check the terrain carefully before you start down any hill.

Shift your weight backward.

Never go down a hill at high speeds.

Avoid going down a hill at an angle that would cause the ATV to lean sharply to one side. Go straight down the hill where possible.

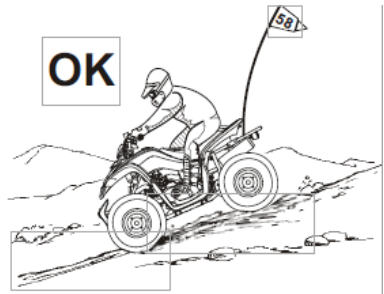

### **POTENTIAL HAZARD**

Stalling, rolling backwards, or improperly dismounting while climbing a hill.

### **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

### **HOW TO AVOID THE HAZARD**

Use proper gear and maintain steady speed when climbing a hill.

If you lose all forward momentum:

Keep weight uphill.

Apply the brakes.

Engage the parking brake after you are stopped.

If you begin rolling backwards:


Keep weight uphill.

Gradually apply the brakes while rolling backwards.

When fully stopped, engage the parking brake.

Dismount on the uphill side or to a side if pointed straight uphill.

Turn the ATV around and mount following the procedure described in this Operator's Manual.

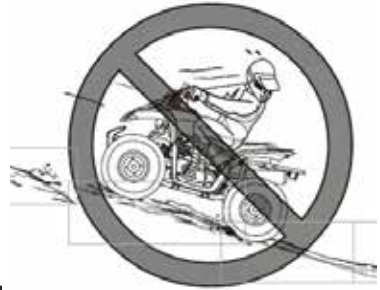

### **POTENTIAL HAZARD**

Operating the ATV with improper tires or improper or uneven tire pressure.

### **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

### **HOW TO AVOID THE HAZARD**

Always use the size and type of tires specified in this Operator's Manual.

Always maintain proper tire pressure.



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.



# Warnings

## **POTENTIAL HAZARD**

Operating the ATV in deep or fast flowing water.

## **WHAT CAN HAPPEN**


Tires may float, causing loss of traction and loss of control, which could result in an accident.

## **HOW TO AVOID THE HAZARD**

Never operate the ATV in fast flowing water or in water deeper than the footrests.

Remember that wet brakes may have reduced stopping capability.

Test the brakes after exiting the water. If necessary, apply the brakes several times to dry out the brake pads.

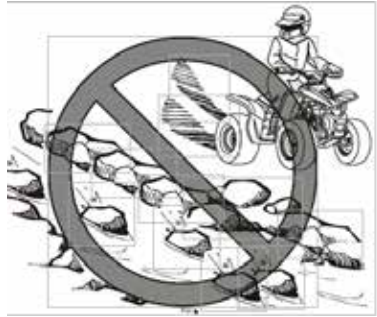

## **POTENTIAL HAZARD**

Skidding or sliding.

## **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

## **HOW TO AVOID THE HAZARD**

Learn to safely control skidding or sliding by practicing at slow speeds on level, smooth terrain.

On extremely slippery surfaces, such as ice or snow, go slow and use caution in order to reduce the chance of skidding or sliding out of control..

## **POTENTIAL HAZARD**

Operating this ATV with improper modifications.

## **WHAT CAN HAPPEN**

Improper installation and improper use of accessories or modification of the ATV may cause changes in operation or handling which, in some situations, may lead to an accident.

## **HOW TO AVOID THE HAZARD**

Never modify this ATV through improper installation or improper use of accessories.

All parts and accessories added to this ATV should be components designed for use on this ATV and should be installed and used according to instructions.

Never install a twist grip throttle. If you have questions, please contact an authorized dealer.

## **POTENTIAL HAZARD**

Improperly operating over obstacles.

## **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

## **HOW TO AVOID THE HAZARD**

Before operating on unfamiliar terrain, check for obstacles.

Never attempt to operate over large obstacles, such as large rocks or fallen trees.

When going over obstacles, always follow proper procedures.



**WARNING**

Indicates a potential hazard that could result in a serious injury or death.

# Warnings

## **POTENTIAL HAZARD**

Failure to release the parking brake before operating the ATV.

## **WHAT CAN HAPPEN**

Operating the ATV with the parking brake engaged could cause a change in handling or loss of brakes and cause an accident.

## **HOW TO AVOID THE HAZARD**

Always release the parking brake before operating the ATV.

## **POTENTIAL HAZARD**

Improperly crossing hills or turning on hills.

## **WHAT CAN HAPPEN**

You may lose control, which could result in an accident.

## **HOW TO AVOID THE HAZARD**

Avoid crossing the side of a hill or turning on a hill whenever possible. Never attempt to turn the ATV around on any hill until you have mastered the turning technique as described in this Operator's Manual. Practice first on level ground.

If you must cross the side of a hill or turn on a hill: Always follow proper procedures described in this Operator's Manual.

Avoid hills with slippery or loose surfaces.

Shift your weight to the uphill side of the ATV.



## **POTENTIAL HAZARD**

Starting or running engine in a closed area.

## **WHAT CAN HAPPEN**

Exhaust fumes are poisonous and may cause loss of consciousness and death within a short period of time.

## **HOW TO AVOID THE HAZARD**

Always operate your ATV outdoors or in an area with adequate ventilation.

## **POTENTIAL HAZARD**

Hot exhaust system.


## **WHAT CAN HAPPEN**

Someone coming in contact with the exhaust system during or after operation could be burned.

## **HOW TO AVOID THE HAZARD**

Do not touch the hot exhaust system.

Do not park the ATV in a place where others might be likely to come in contact with the exhaust system.

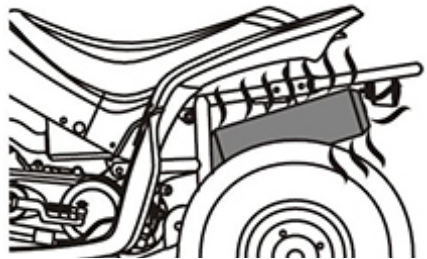

## **WARNING**

Indicates a potential hazard that could result in a serious injury or death.

# Warnings

## **POTENTIAL HAZARD**

Operating in areas where you might not be seen by other off-road ATV's.

## **WHAT CAN HAPPEN**

You may be in a collision which may result in personal injury.

## **HOW TO AVOID THE HAZARD**

Always mount a caution flag on the ATV to make you more visible.  
Watch carefully for other ATV riders and other vehicles.



## **POTENTIAL HAZARD**

Turning improperly.

## **WHAT CAN HAPPEN**

ATV could go out of control, causing a collision or overturn.

## **HOW TO AVOID THE HAZARD**

Always follow proper procedures for turning as described in this Operator's Manual.  
Practice turning at low speeds before attempting to turn at faster speeds. Do not turn at speeds too fast for your skills or the conditions.  
Do not turn at excessive speeds.

## **POTENTIAL HAZARD**

Overloading this ATV.

## **WHAT CAN HAPPEN**

Could cause changes in ATV handling, stability and braking which could lead to an accident or injury.

## **HOW TO AVOID THE HAZARD**

Never exceed the stated maximum weight capacity for this ATV.




## **WARNING**

Indicates a potential hazard that could result in a serious injury or death.

## Hangtags and Warning Labels

Your ARGO ATV comes with various hangtags and several labels containing important safety information related to the vehicle. Anyone who operates the ATV should read and understand the important safety information before operating.

The hangtags and labels are considered to be a permanent part of the ATV. If a label becomes hard to read or comes off the vehicle, contact your ARGO ATV dealer for a replacement.

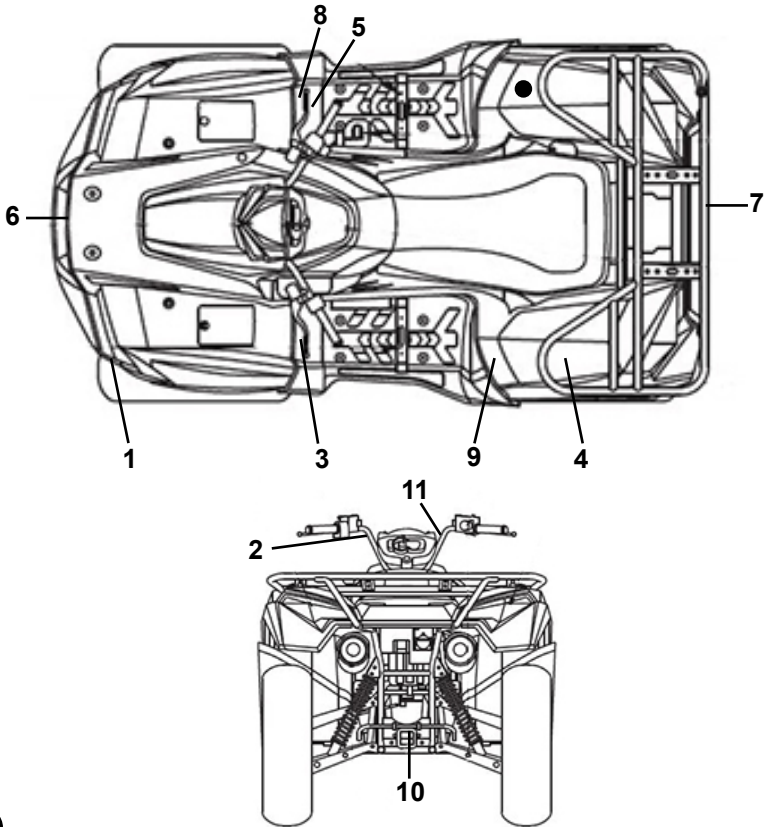

①

### VEHICLE EMISSION CONTROL INFORMATION / VEHICLE EVAPORATIVE EMISSION CONTROL INFORMATION

**MODEL NAME:**

**ENGINE DISPLACEMENT:**

**ENGINE FAMILY:**

**PERFORMANCE FAMILY:**

**EVAPORATIVE FAMILY:**

**ENGINE EXHAUST CONTROL SYSTEM:**

THIS VEHICLE MEETS U.S. EPA AND CALIFORNIA EXHAUST REGULATIONS FOR \_\_\_\_\_ MODEL YEAR NEW ATVS AND IS CERTIFIED TO \_\_\_\_\_

EXHAUST EMISSION STANDARDS IN CALIFORNIA.

THIS VEHICLE CONFORMS TO CALIFORNIA EVAPORATIVE EMISSIONS REGULATIONS APPLICABLE TO \_\_\_\_\_ MODEL YEAR NEW ATVS AND IS CERTIFIED TO 1 GRAM TOG/DAY EVAPORATIVE EMISSION STANDARD IN CALIFORNIA.

THIS VEHICLE IS CERTIFIED TO OPERATE ON UNLEADED GASOLINE.

**ENGINE TUNEUP SPECIFICATIONS:**

IGNITION TIMING: NOT ADJUSTABLE

IDLE SPEED: 1500 ± 100 rpm IN NEUTRAL

IDLE MIXTURE: NOT ADJUSTABLE

VALVE CLEARANCE: INTAKE: 0.10 ± 0.02 mm

EXHAUST: 0.18 ± 0.02 mm

SPARK PLUG: NGK CR7E

FUEL: UNLEADED GASOLINE ONLY - 87(R+M)/2

OCTANE

OIL: 5W - 30 (SEE OWNER'S MANUAL)

NO OTHER ADJUSTMENT NEEDED.


MANUFACTURED: / / (MONTH/YEAR)

**ARGO**

## Hangtags and Warning Labels

### General Use Hangtag

②

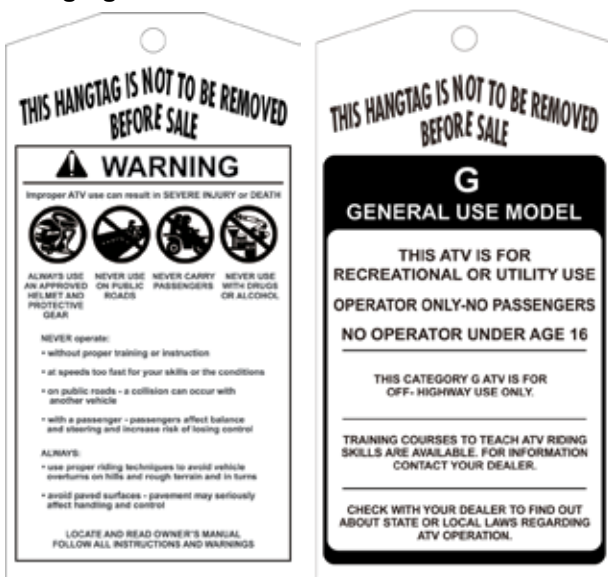

③



## Hangtags and Warning Labels

④

 <b>WARNING</b>	
	<p><b>NEVER</b> ride as a passenger.</p> <p>Passengers can cause a loss of control, resulting in <b>SEVERE INJURY</b> or <b>DEATH</b>.</p>

⑤

 <b>WARNING</b>	
	<p>Operating this ATV if you are under the age of 16 increases your chance of severe injury or death.</p> <p><b>NEVER</b> operate this ATV if you are under age 16.</p>

⑥

 <b>WARNING</b>	
	<p>Never carry passenger on this carrier.</p> <p>Maximum load: 52 kg (114lbs).</p>


⑦

 <b>WARNING</b>	
	<p>Never carry passenger on this carrier.</p> <p>Maximum load: 95 kg (209lbs).</p>


⑧

 <b>WARNING</b>
<p><b>NEVER EXCEED 10 MPH(16 KPH) WHEN DIFFERENTIAL IS LOCKED. LOSS OF CONTROL AND SEVERE INJURY OR DEATH MAY RESULT AT HIGH SPEEDS WHEN DIFFERENTIAL IS LOCKED.</b></p>

⑨ *EPS*

 <b>WARNING</b>
<p>Improper tire pressure or overloading can cause loss of control. Loss of control can result in severe injury or death.</p> <ul style="list-style-type: none"><li>• Cold tire pressure: Front: 5.0 psi (34.5 kPa) Rear: 4.5 psi (31.0 kPa)</li><li>• Maximum weight capacity: <b>542 lbs (246 kg)</b></li></ul>

⑨ *LE*

 <b>WARNING</b>
<p>Improper tire pressure or overloading can cause loss of control. Loss of control can result in severe injury or death.</p> <ul style="list-style-type: none"><li>• Cold tire pressure: Front: 5.0 psi (34.5 kPa) Rear: 5.0 psi (34.5 kPa)</li><li>• Maximum weight capacity: <b>542 lbs (246 kg)</b></li></ul>

## Hangtags and Warning Labels

10

 **WARNING**

Exceeding vehicle's towing limit could cause an accident. Reduce speed when towing a trailer. Read operator's manual for details.

**MAXIMUM TONGUE WEIGHT :**  
35 lbs. (16 kg)


**MAXIMUM TOWING CAPACITY :**  
1000 lbs. (454 kg)

11


  
**ARGO**

MODEL: Xplorer XR 700 EPS / Xplorer XR 700 LE  
895 cc 4-Stroke, TBI, HO2S Emission Control

**ARGO CARES ABOUT THE ENVIRONMENT !  
'0' IS THE CLEANEST AND '10' THE LEAST CLEAN ALLOWED:  
YOUR ATV IS A '3.2'.**



Kwang Yang Motor Co., Ltd.  
Taiwan R.O.C.

  
**WARNING STATEMENT:**

THE REMOVAL OR MODIFICATION OF EVAPORATIVE EMISSION-RELATED PARTS ON THIS OHRV IS ILLEGAL. VIOLATORS MAY BE SUBJECT TO CIVIL AND/OR CRIMINAL PENALTIES AS PROVIDED UNDER CALIFORNIA AND FEDERAL LAW.

THIS TAG MAY NOT BE REMOVED UNDER PENALTY OF LAW EXCEPT BY THE VEHICLE OWNER.

## SECTION 3

# Specifications

### Specifications

ENGINE AND DRIVE	
Type	Four-Cycle/Liquid Cooled DOHC
Bore x Stroke	102 x 85 mm (4.02 x 3.35 in.)
Displacement	694.6 cc
Cylinder Arrangement	Single
Compression Ratio	10.7:1
Starting System	Electric
Lubrication System	Wet sump
Ignition System	ECU
Generator System	A.C. magneto
Battery Type	12V, 18AH MF
Spark Plug Type	NGK CR7E
Spark Plug Gap	0.024 - 0.028 in (0.6 - 0.7 mm)
Brake Type	Front: Dual disk brake Rear: Single disk brake
Air Filter	Wet type element
Clutch Type	Wet, centrifugal automatic
Fuel Delivery	Electronic Fuel Injection (EFI)
CHASSIS	
Length (Overall)	84.3 in (214 cm)
Width (Overall)	49.0 in (124.5 cm)
Height (Overall)	49.2 in (125.0 cm)
Dry Weight	736 lb (334 kg)
Seat Height	34.6 in (88.0 cm)
Wheel base	51.1 in (129.7 cm)
Minimum Ground Clearance	10.2 in (26.0 cm)
Tires	Type: Tubeless (BIAS) EPS Models: Size: Front - 25 x 8-12 Size: Rear - 25 x 10-12 LE Models: Size: Front - 26 x 8-14 Size: Rear - 26 x 10-14
Tire Pressure:	EPS Models: Front: 5.0 psi (35 kPa) Rear: 4.5 psi (32 kPa) LE Models: Front: 5.0 psi (35 kPa) Rear: 5.0 psi (35 kPa)



## Specifications

### MISCELLANEOUS

Rims	EPS Models: - Steel LE Models - Aluminum
Suspension	Front: 7.0 in (17.6 cm) Rear: 7.4 in (18.8 cm) Front / Rear: Dual A-arm
Fuel (Recommended)	87 Octane Regular Unleaded
Gas Tank Capacity (Rated)	5.5 gal (21 L)
Engine Oil (Recommended)	5W-30
Engine Oil Capacity	Total: 3.1 qt (2.9 L) Change: 2.54 qt (2.4 L) Change w/filter: 2.75 qt (2.6 L)
Front / Rear Gear Case Oil (Recommended)	80W-90 Hypoid
Front Gear Case Capacity	Total: 9.2 fl oz (272.1 ml) Change: 8.48 fl oz (250.8 ml)
Rear Gear Case Capacity	Total: 8.48 fl oz (250.8 ml) Change: 7.78 fl oz (230.1 ml)
Headlight	12V/35W/35W x 2
Weight Limits Load Capacity (Maximum) Front Rack (Maximum) Rear Rack (Maximum) Tongue Weight Towing Capacity	542 lb (246 kg) 114 lb (52 kg) 209 lb (95 kg) 35 lb (16 kg) 1000 lb (454 kg)
Tail Light / Brake Light	12.5V/2.5W (LED), 12.5V/1W (LED)
Position Light	12.5V/1W (LED), 12.5V/2W (LED)
Specifications subject to change without notice.	

## SECTION 4

### Description and Identification

#### Identification number records

Record the key identification numbers, frame serial number, engine serial number and model code information for assistance when order replacement parts.

IGNITION KEY NO. \_\_\_\_\_

STORAGE KEY NO. \_\_\_\_\_

FRAME NO. \_\_\_\_\_


ENGINE NO. \_\_\_\_\_



#### Key identification number

The key identification numbers are stamped on the hang tag as shown. Use these numbers when ordering a replacement keys.

1. Ignition Key
2. Storage Key

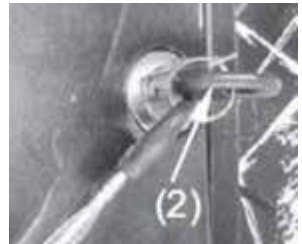

#### Frame and Engine Serial Number

The frame serial number is stamped on the front of the frame.


The engine serial number is stamped on the left crankcase.

These numbers are required by the dealer to complete any Warranty process. No warranty will be allowed by ARGO if the VIN or ESN has been tampered with in any way.



## Location of Parts and Controls


### Front View

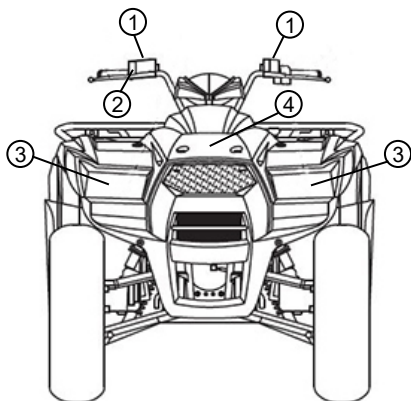

1. Brake Reservoir
2. Throttle Limiter
3. Headlights
4. Electrical Access Panel


**NOTE:** The machine you have purchased may differ slightly from those shown in the illustrations of this manual.

### Rear View

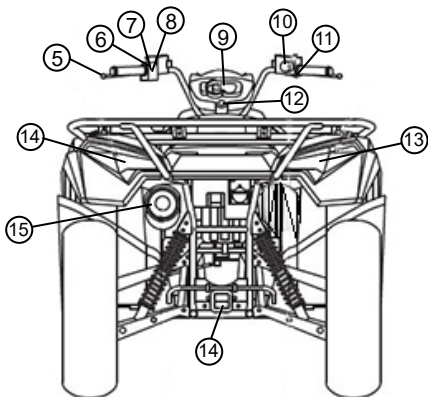

5. Hand Brake Lever (Front/Rear)
6. Headlight Hi/Lo Switch
7. Starter Switch
8. Emergency Stop Switch
9. Instrument and Indicators
10. 2WD/4WD/LOCK Selector Switch
11. Throttle Lever
12. Ignition Switch
13. Taillight / Brakelight
14. Trailer Hitch
15. Spark Arrester


### Right Side View

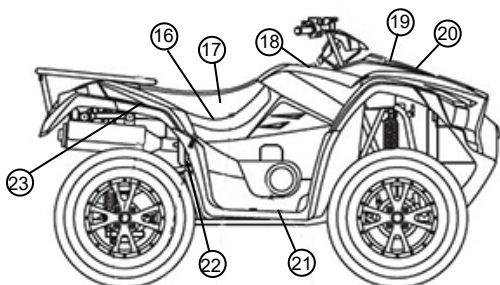

16. Seat Lock Lever
17. Seat
18. Accessory Plug
19. Battery
20. Coolant Reservoir
21. Foot Brake Pedal (Front/Rear)
22. Brake Pedal Fluid Reservoir
23. Fuel Fill Cap

## Location of Parts and Controls

### Left Side View

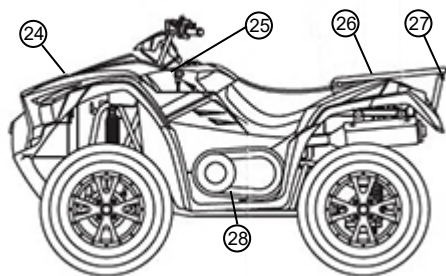

- 24. Front Cargo Rack
- 25. Drive Select Lever
- 26. Rear Cargo Rack
- 27. Flag Pole Bracket
- 28. V-Belt Cover Drain

## Control Functions

### Ignition Switch

Functions of the respective switch positions are as follows:

#### “OFF” position:


All electrical circuits are switched off.  
The key can be removed in this position.

#### “ON” position:

The electrical circuits are switched on.  
The engine can be started. The key  
cannot be removed in this position.

#### “LIGHTS” position:

The ignition switch is “ON” while in this  
position. Light and tail light will illuminate.  
All electrical circuits are switched on.  
The engine can be started. The key  
cannot be removed in this position.

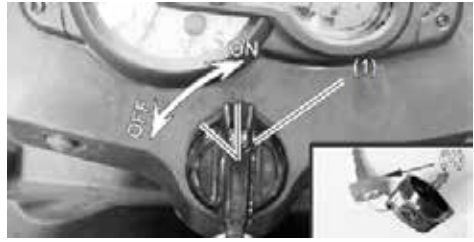


1. Ignition Switch
2. Key



## CAUTION

Always leave the ignition switch in the “OFF” position when the engine is not running. Leaving the ignition switch in the “ON” position when the engine is not running may cause the battery to discharge.

## Instruments and Indicator

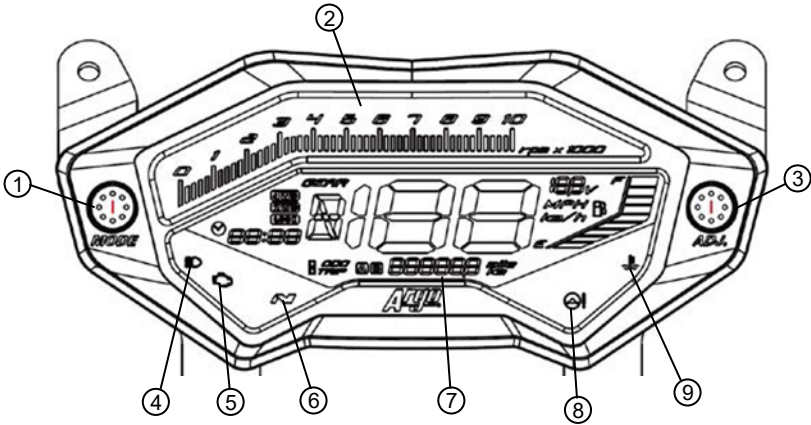

1. MODE Button
2. Tachometer
3. ADJ Button
4. High Beam Indicator
5. EFI System Indicator
6. Neutral Gear Position Indicator
7. Multifunction Display
8. EPS Warning Indicator
9. Coolant Temperature Warning Indicator

## Control Functions

### Mode Button

This button is used to select km/h, mph, km and mile.

This button is also used to adjust the time and reset the trip meter.

### Tachometer

The electronic tachometer allows the operator to monitor the engine RPM and keep it within the power range. When the key is turned to the "ON" position, the tachometer will illuminate once and then goes out in order to test the electrical circuit.

**NOTE: Do not operate the engine above the 8000 rpm or above range.**

### ADJ Button

This button is used to select ODO, TRIP A and TRIP B.

This button is also used to adjust the time and reset the trip meter.

### High Beam Indicator

The high beam indicator will illuminate when the high beam headlight switch is selected.

### EFI System Indicator

Check engine lamp will illuminate when the EFI system has detected a fault.

### Neutral Gear Position Indicator

Neutral Gear Position "N" will illuminate when the vehicle is shifted into the neutral gear position.

### Multi-function Display

The display includes the following functions:

Speedometer	Odometer / Trip Meter / Engine Run Time
Digital Clock	2WD/4WD/LOCK Indicator
Battery Voltage	Fuel Gauge
Gear Select Display	

### EPS Warning Indicator

The EPS warning indicator will illuminate momentarily when the engine starts, then goes off in one second. If the warning light illuminates any other time, it indicates the ECU or actuator has malfunctioned. Stop driving the vehicle immediately and take it to an authorized ARGO dealer for service.

### Coolant Temperature Warning Indicator


When the coolant temperature reaches a specified level, the coolant temperature warning indicator will illuminate to warn you the coolant temperature is too hot. If the indicator comes on during operation, stop the engine as soon as it is safe to do so and allow the engine to cool down.

## Control Functions

### Left Handlebar Switches

#### Headlight Dimmer Switch


1. Headlight Dimmer Switch
2. High Beam
3. Low Beam
4. Headlight "OFF"

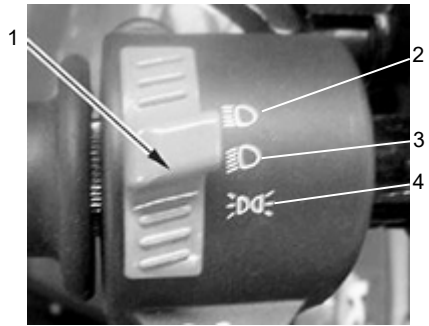

#### Engine Starter Button

With the transmission in "N" (neutral), the key switch in the "ON" position and the emergency stop switch in the "RUN" position, depress the starter button to start the engine.

1. Starter Button
2. Emergency Stop Switch "RUN" position

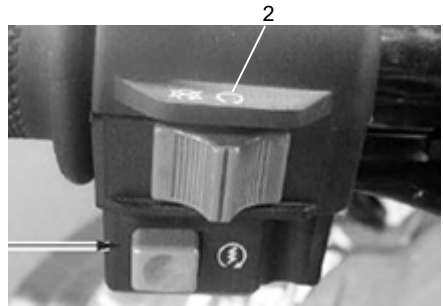


### CAUTION

If the starter button is pushed with the ignition switch in the "ON" position and the emergency stop switch in the "OFF" position, the starter motor will be activated but the engine will not start. Premature starter failure may occur. Ensure the emergency stop switch is in the "RUN" position.

#### Emergency Stop Switch

When the emergency stop switch is in the "RUN" position, the engine will operate. When the switch is in the "OFF" position, the engine will not operate. This switch is intended primarily as a safety or emergency control and should normally remain in the "RUN" position.

Emergency Stop Switch  
"RUN" position

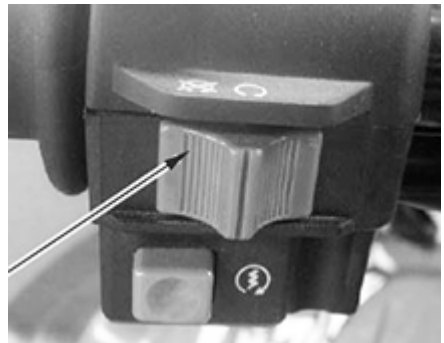

**NOTE:** If you stop your ATV by turning the emergency stop switch to the "OFF" position, be sure to turn the ignition switch to the "OFF" position to prevent battery discharge.

## Control Functions

### Right Handlebar Switches

#### 2WD / 4WD Switch

The 2WD/4WD selector switch allows you to operate your ATV in either two-wheel drive (rear wheels powered) or four-wheel drive (open front differential).

The 2WD/4WD/LOCK select switch is located above the throttle lever. To select the drive mode, push and turn the switch to the desired position. Present drive mode is displayed on the multi-functional gauge.



### CAUTION

Never operate the 2WD/4WD selector switch while your ATV is in motion as you may damage the differential.

### Differential Lock Switch

The differential lock switch is located above the throttle lever.

The front axle is equipped with a lockable differential that allows the operator to choose between an open differential or a closed differential in low traction situations.

In 2WD mode, the display has no indicator on the display gauge.

In 4WD mode, the display should indicate 4WD; then activate the lock switch, 4WD and LOCK should appear on the display gauge.



### WARNING

Never exceed 10 mph (16 kph) when differential is locked. Loss of control at high speeds may result in severe injury or death when differential is locked. Due to all four wheels powered when in "LOCK" mode, it will be more difficult to turn the handlebars.



## Control Functions

### Throttle Lever

The position of the throttle lever controls engine RPM. Pushing it forward increases engine RPM, allowing the lever to return to its original position decreases engine RPM.



## WARNING

### POTENTIAL HAZARD

Throttle malfunction.

### WHAT CAN HAPPEN

The throttle could be hard to operate, making it difficult to speed up or slow down when you need to. This could cause an accident.

### HOW TO AVOID THE HAZARD

Check the operation before you start the engine. If it does not work smoothly, check for the cause.


Correct the condition before riding the ATV.

Consult an authorized ARGO dealer if you can not locate or solve the issue yourself.

### Speed Limiter

The speed limiter keeps the throttle from fully opening, even when the throttle lever is pushed to the maximum. Turning "IN" the adjuster limits the top speed of the ATV. Turning "OUT" increases the top speed of the ATV.

1. Adjuster
2. Locknut
- A. 0.52 in (13 mm maximum)

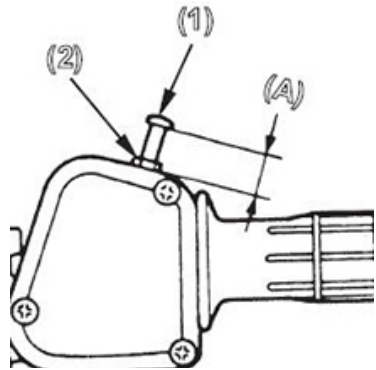

**NOTE:** Your ATV is equipped with an ignition limiter that retards timing when approaching maximum engine RPM. When this RPM limiter is activated, it can be misinterpreted as a high-speed ignition misfire.



## WARNING

### POTENTIAL HAZARD

Improper adjustment of the speed limiter and throttle.

### WHAT CAN HAPPEN

The throttle cable could be damaged. Improper throttle operation could result causing you to lose control of the ATV and be injured or cause an accident.

### HOW TO AVOID THE HAZARD

Do not turn the speed adjuster out more than 0.52 in (13 mm). Always make sure the throttle lever free play is adjusted to 0.12 - 0.2 in (3 - 5 mm).

## Control Functions

### Brakes

Your ATV is equipped with front and rear hydraulic brakes that can be activated with hand and foot controls.

**LEFT HAND BRAKE LEVER** - Activates front and rear brakes

**FOOT BRAKE PEDAL** - Activates rear brakes

### Left Hand Brake Lever and Parking Brake Lock (Front and Rear Wheels)

The left hand brake mounted on the left handlebar activates the front and rear brakes on your ATV. To apply the front and rear brakes, squeeze the lever towards the handlebar grip.

To engage or release the parking brake, use the following procedure.

1. Squeeze the hand brake lever two or three times to achieve maximum brake pressure; then release.
2. Depress and hold the brake lever.
3. While holding in the hand brake lever, engage the parking brake lock.



Parking brake lock

Brake lever

**NOTE: The parking brake lock will click as it engages and the brake lever will not return to its released position.**

4. Release the parking brake lock by squeezing the brake lever. Once the lock is disengaged, the lever will return to its released position.

Use the following procedure to verify that the parking brake lock locks the front and rear wheels when engaged:

1. Squeeze the hand brake lever two or three times.
2. Engage the parking brake lock.
3. Attempt to push the ATV.

**NOTE: The parking brake lock must lock the ATV's front and rear wheels. If it does not, take your ATV to an authorized ARGO dealer for service.**



### WARNING


Ensure the parking brake lock has been disengaged before operating your ATV. An accident can result if the parking brake is left engaged while the ATV is being operated. Never rely on the parking brake as the sole means of securing the ATV when parking on a hill. Always block the downhill side of the ATV's wheels or park the ATV perpendicular to the hillside.

## Control Functions

### Foot Brake Pedal

Depressing the foot brake pedal with your right foot will apply the rear brakes.

1. Brake Pedal

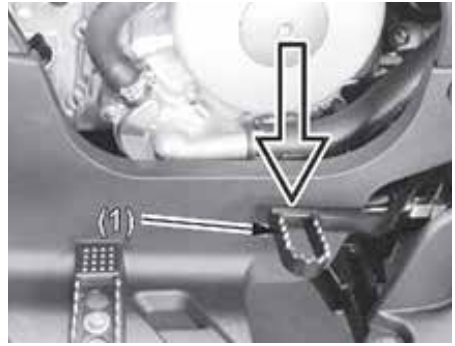

### WARNING

Prolonged and repetitive use of the ATVs hydraulic brake for high speed stops will cause overheating of the brake fluid and premature brake pad wear which can cause unexpected loss of braking ability. Note the position of your right foot so it is not resting or applying pressure to the rear foot brake. Premature brake failure may occur.

### Transmission Ranges


This ATV is equipped with an automatic, dual-range transmission with reverse capability. To shift your ATV into the different drive ranges, follow the below steps.

To properly change transmission range:

1. Apply brake.
2. Move shift lever to the desired range.
3. Release brake.

**NOTE:** The HIGH range is for normal riding conditions with light loads. The LOW range is for carrying heavy loads, slow speeds or trailer towing. LOW range position provides slower speed and greater torque to the wheels.

1. Drive Select Lever
2. Low Range
3. High Range
4. Neutral
5. Reverse
6. Park

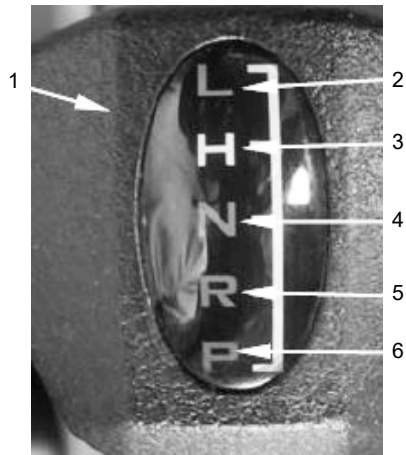

### CAUTION

Always shift the transmission into LOW range when operating on wet or uneven terrain, when towing or pushing heavy loads, or when using a plow. Failure to follow this caution may result in premature V-belt failure or other damage to the drive system.

## Control Functions



### CAUTION

Never shift the transmission while your ATV is in motion. Should your ATV be on a surface that is not level, engage the parking brake (brake lever lock) before shifting into another gear or into reverse.

**NOTE:** Apply the rear brake and move the shift lever into the “P” position before turning off the engine when parking the vehicle on an incline. If you park on an incline with the shift lever in “H”, “L” or “R” position, the vehicle weight may make it difficult to shift into “N” neutral.

### Fuel Tank Cap

Fuel tank is located in the right rear of the ATV. After refueling, be sure to tighten the fuel tank cap.



### Seat Removal

The seat lock lever is located on the right side of the ATV. To remove the seat, pull up on the seat lock lever and lift on the rear of the seat.



1. Seat Lock Lever

## **Control Functions**

### **Seat Installation**

To install the seat, slide the center tab on the seat into the seat retainer on the chassis and press the rear of the seat down firmly until it locks into place.

**NOTE: Ensure the seat is properly fitted into position and locked before operation.**



### **Safety Flag Bracket**

To mount a safety flag into the bracket. Flag poles are optional equipment available from your ARGO dealer.

**NOTE: Safety flags are required in some riding areas. Check local regulations before riding.**



### **Storage Compartment**

Your ATV provides three storage compartments; one on each side of the front fenders and one in the center (in front of the seat).

Be careful not to flood this area when washing your ATV or riding through water, and never put any electric conduction material in the storage compartments.

## Control Functions

### Accessory Plug

The accessory plug is located inside the center storage area.



### CAUTION

Always use electrical accessories on your ATV that draw less than 120 W.

To use the accessory plug:

1. Turn the ignition switch to the "ON" position, then start the engine.
2. Turn the headlights "OFF".
3. Open the accessory plug cap and then insert the accessory plug into the socket.

Be sure the engine is running and the headlights are turned off before using the accessory socket, otherwise you may drain the battery.

The accessory plug rated capacity is DC 12V, 120 W (10A) or less. If you exceed this capacity, you may blow a fuse.

### Fuses

The ATV fuses are located in a power distribution module in front of the steering post under the electrical access panel. If there is any type of electrical system failure, always check the fuses first.

**NOTE:** To remove a fuse, compress the locking tabs on either side of the fuse cover and lift it out.



### CAUTION

Always replace a failed fuse with a fuse of the same type and rating. If the new fuse fails after a short period of use, consult an authorized ARGO dealer immediately.

### Tool Kit

A tool kit provided with your ATV is sufficient to perform routine maintenance and simple repairs. Any extensive work requiring additional tools should be performed by your authorized ARGO dealer.

It is recommended to put the tool kit in the vinyl bag and always carry them in the storage compartment.

1. Tool Bag
2. 10 / 14 mm Wrench
3. Screwdriver Handle
4. Standard/Phillips screwdriver
5. Spark Plug Wrench (A)
6. Spark Plug Wrench (B)
7. Air Pressure Gauge
8. Rear Shock Adjuster
9. Spark Plug Wrench (C)



## NOTES

## **SECTION 5**

# **Getting to Know Your ATV**

### **Getting To Know Your ATV**

This ATV is for recreation use. This section, riding your ATV, provides general ATV riding instructions for recreational riding. The skills and techniques described in this section, however, are appropriate for all types of riding. Riding your ATV requires special skills acquired through practice over a period of time. Take the time to learn the basic techniques well before attempting more difficult maneuvers.

Riding your new ATV can be a very enjoyable activity, providing you with hours of pleasure. But it is essential to familiarize yourself with the operation of the ATV to achieve the skill necessary to enjoy riding safely. Before you begin to ride, be sure you have read this Operator's Manual completely and understand the operation of the controls. Pay particular attention to the safety information and special safety messages. Please also read all caution and warning labels on your ATV.

### **Before Riding**

Before operating the ATV, read and understand the "Safety Information" section (beginning on page 7) carefully.

You need to prepare before riding. This includes getting proper instruction, making sure your ATV is in good operating condition, and learning some basic safe-riding rules.

### **Rider Preparation - Age Recommendation**

The minimum age for this ATV model is 16. For safety, never let anyone under 16 years old operate this vehicle.

### **Pre-operation Checks**

Always inspect your ATV each time you use it to make sure the ATV is in safe operating condition. Perform the pre-operation checks listed in this manual. Always follow the inspection and maintenance procedures and schedules described in the Operator's Manual.

### **Safe Riding Rules**

Please note that the safe Riding Rules apply to all ATV riders. Even if you are an experienced rider, or after you become one, continue to follow these guidelines for your own safety and enjoyment.

### **Protective Apparel**

Always wear an approved motorcycle helmet when riding your ATV. You should also always wear goggles or a face shield, gloves, boots, a long-sleeved shirt or jacket, and long pants.



## **Getting To Know Your ATV**

### **Weight Limits**

There are limits to how much weight can be carried on your ATV. See Weight Limits section in the Specifications section. Modifying your ATV, using non-standard equipment or riding on terrain that is not flat and smooth could further reduce these limits.

Never exceed the stated load capacities for this vehicle. Cargo should be properly distributed and securely attached. Reduce speed when carrying cargo or pulling a trailer and allow greater distance for braking.

### **Accessories**

Genuine ARGO accessories have been specifically designed for and tested on this vehicle. Because ARGO cannot test all other accessories, you are personally responsible for properly selecting, installing, and using non- ARGO accessories.

1. Carefully inspect the accessory to make sure it does not block any lights, reduce ground clearance, or limit suspension travel, steering travel, or other controls.
2. Make sure the accessory does not interfere with your ability to shift body position on the seat or operate hand and foot controls.
3. Do not add electrical equipment that will exceed the vehicle's electrical system capacity. A failed fuse could cause a loss of lights or engine power.

### **No Modifications**


Modifying this ATV or removing original equipment may render the vehicle unsafe or illegal. Spark arresters and mufflers are required in most areas. Don't modify your exhaust system or emission control system components. Remember, excessive noise bothers everyone and creates a bad image for off-road vehicles.

### **For Off-Road Use Only**

This ATV is designed and manufactured for off-road use only.

Do not ride in areas posted "no-trespassing".

Do not ride on private property without getting permission.

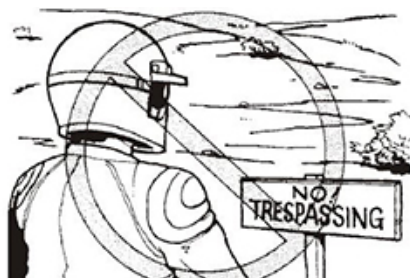

### **Environment**

The environment that you will operate your ATV in is often harsh and sometimes dangerous if you don't take proper precautions.

### **Weather**

You need to consider the weather when you participate in an outdoor activity such as riding an ATV. It is dangerous to ride your ATV when the weather is bad or could potentially become bad. Before starting out on your ATV, check the weather forecast for the location and duration of your ride.

## **Getting To Know Your ATV**

### **Terrain**

Always pay close attention to the terrain you're on, even if it is in an area familiar to you. Do not assume that the landscape you're used to doesn't change. Changes to landscape can happen at any time; fences can be constructed and excavations dug in a short period of time. Weather, climate, and development take their toll as well as erosion and other changes that can affect your ATVs ability to ride smoothly and securely.

Because terrain can constantly change in configuration, you may not know how it has changed until you get there. Whether it's familiar or not, check out your surroundings before and during your ride.

### **Night Riding**

It is best to avoid riding your ATV at night when visibility is limited. With little to no light, it is difficult to see what is around you.

If you must ride at night, proceed slowly and never ride at a speed that would prevent you from reacting to something that could come up in the limited view of your ATVs headlamps.

### **Paved Surfaces**

Avoid riding your ATV on paved surfaces. Your ATV was not designed for use on pavement and its handling will become more difficult and unpredictable that when riding on non-paved surfaces.

### **Trail Riding**

Use sound judgment when trail riding with your ATV. You should only ride on trails that suit your riding ability. If the trail is very rugged, standing up on your footrests will make it easier for you to endure the rough terrain.

Make yourself visible to others by using your ATVs headlights and taillights. If you stop, pull completely off the trail in a way to protect yourself, your ATV, and the environment.

Sloped trails (trails that slant to allow rain to run off) make trail riding more challenging. To ride on sloped trails, keep your weight shifted towards the uphill of the slope. Proceeding slowly with your weight shifted towards the slope will help you from sliding off the trail.

Be aware of the rules and the laws that govern the area in which you will be riding your ATV. Learn which trails you can legally and safely ride on and who else might be on those trails. Be aware of the signs posted in the areas you ride that would designate trail types and restrictions.

## Getting To Know Your ATV

### Turning Your ATV



#### WARNING

Always follow proper procedures for turning as described in this Operator's Manual. Practice turning at low speeds before attempting to turn at faster speeds. Do not turn at speeds too fast for your skills or the conditions. ATV could go out of control causing a collision or overturn.

#### Leaning, Weight Shift, and Balance

When turning your ATV, the goal is to move forward and slide over to the side of the seat that is on the inside of the turn. Support your body weight on the outside footrest and lean your body into the inside of the turn. Pay attention to the ATV's handling. If you feel the tires coming off the ground, reduce speed, shift more of your body weight to the side of the ATV that is lifting, and make the turn wider if possible.



#### Wide Turns

About 20% of ATV accidents happen during turns. If you don't understand turning techniques, you can lose control of your ATV by losing traction, plowing, or tipping. Use this riding method for wide turns:

1. Ease off the throttle as you approach the turn to slow down.
2. Use the principles of leaning, weight shifting, and balancing: shift your body weight to the inside of the turn.
3. Gradually increase your speed as you come out of the turn.



## Getting To Know Your ATV

### **Sharp Turns**

After mastering wide turns, practice the advanced skill of sharp turns. Use this riding method for sharp turns:

1. Ease off the throttle as you approach the turn to slow down.
2. Use the principles of leaning, weight shifting, and balancing: shift your body weight to the inside of the turn.
3. You may have to lean into the turn more than you do in a wide turn.
4. If shifting your weight and balance are not enough to keep the ATV tires on the ground, straighten out the handlebars as much as you can.
5. Gradually increase your speed as you come out of the turn.



### **Quick Turns**

Quick turns are the most difficult turns, and should only be attempted after you have become very familiar with the handling characteristics of your ATV. Use this riding method for quick turns:

1. Ease off the throttle as you approach the turn to slow down.
2. Turn the handlebars, shift your weight, and balance at the same time as you enter the turn (use the principles of leaning, weight shifting, and balancing: shift your body weight to the inside of the turn).
3. Follow your weight shift with slight acceleration.
4. For multiple turns, repeat this movement as needed.
5. To make your turn quicker, try raising yourself off the seat a few inches as you shift your weight to your outside foot.




## Getting To Know Your ATV

### **K-Turns**

Use the K-turn maneuver if you accidentally stall your ATV while riding uphill. Use a K-turn will enable you to point the ATV downhill in a controlled manner and prevent the ATV from rolling back. Use this turning method for K-turns:

1. Stop where you are, apply the brakes, and shift the transmission into neutral ("N").
2. Shut off the ATVs engine.
3. Keep your body weight shifted forward.
4. Dismount the ATV on the uphill side.
5. If you are to the left of the ATV, turn the handlebar all the way to the left.
6. Partially release the brake, but lightly hold the brake lever so you can control the ATV rolling.
7. Let the ATV roll slowly to your right side until it faces slightly downhill.
8. Re-apply the brakes firmly.
9. Re-mount the ATV from the uphill side, and keep you weight shifted uphill when you sit down on the seat.
10. Start the engine and follow the method for riding downhill.

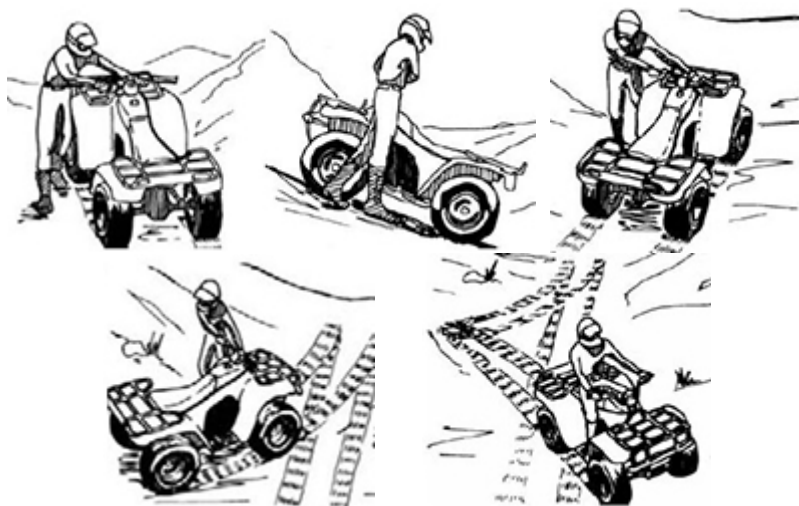

## Getting To Know Your ATV

### Climbing Uphill



#### WARNING

Climbing hills improperly can cause overturns or loss of control. Use proper riding techniques described in this Operator's Manual.

Approximately 20% of ATV accidents that happen while riding on hills and as a result of the ATV rolling or flipping over. Use extreme caution when riding your ATV on hills. Use this method for riding uphill:

1. Slightly accelerate before you start to climb a hill and maintain a steady pace.
2. Lean as far forward as possible. For steeper hills, lift slightly off the ATV seat, stand and lean forward.
3. If you lose speed, carefully apply more throttle. Be prepared to release the throttle so your front tires do not lift.
4. If you still have forward momentum and the terrain permits, do a U-turn and go back down the hill.
5. If you have lost all forward motion, use the K-turn maneuver and go safely down the hill.

### Never Operate Up or Down Hills Steeper than 25°

25° MAX



#### WARNING

Stalling, rolling backwards or improperly dismounting while climbing a hill could result in ATV overturning. If you cannot control the ATV, dismount immediately on the uphill side.

## Getting To Know Your ATV

### Riding Down Hill



#### WARNING

Going down a hill improperly could cause overturns or loss of control. Always follow proper procedures for going down hills as described in this Operator's Manual.

Success in riding downhill depends on how familiar and skilled you are with using your brakes. Use care and balance braking force and downhill speed so you don't lose control. Use this method for riding downhill:

1. Shift your body weight as far back on the seat as possible.
2. Do not shift the ATV into neutral ("N").
3. Lightly apply the brakes and use very little throttle.



### Crossing a Slope



#### WARNING

Improperly crossing hills or turning on hills could cause loss of control or cause the ATV to overturn.

Side-hilling requires advanced ATV riding skills as the terrain can be difficult and unpredictable. Whether your skills are advanced or not, try to avoid this kind of riding. If you are in a situation where you absolutely have to side-hill on your ATV, use this riding method:

1. Keep the ATV speed low and consistent.
2. Shift all your body weight to the uphill side of the seat; also, support your weight on the uphill footrest.
3. Steer as if you are driving into the hill.
4. If your ATV feels like it may tip over, turn the handlebar downhill. If that is not possible because of the terrain or other conditions, stop and get off the ATV. Dismount your ATV on the uphill side.



## Getting To Know Your ATV

### Swerving

Swerving is an emergency maneuver required to avoid an obstacle, but is similar to a quick turn. Swerving differs as a quick turn involves slight acceleration during the turn. Do not accelerate if you swerve to maintain better control of your ATV. If you are in a situation where you feel you must swerve, use this riding method:

1. Ease off the throttle as you approach the obstacle.
2. Turn the handlebar, and at the same time, shift your weight and balance as you swerve. Using the principles of leaning, weight shifting, and balancing, shift your body weight to the inside of the turn.
3. Avoid using the brakes until the obstacle avoidance swerve is complete and you have regained full control of your ATV.



### Riding Over Rough Terrain



#### **WARNING**

Riding improperly over obstacles could cause loss of control or a collision. Before operating in a new area, check for obstacles. Never attempt to ride over large obstacles, such as large rocks or fallen trees. When you go over obstacles, always follow proper procedures as described in the Operator's Manual.

Crossing obstacles is dangerous, and even experienced ATV riders should avoid this practice if possible. Riding over logs, rocks, and ruts means you must combine all the active riding skills into one big motion. Your ATV will respond differently for different obstacles (logs, rocks, etc.), but these are general guidelines for overcoming two-track (both tires contacting the obstacle at the same time) obstacles.

1. Keep the ATVs speed very low - less than 5 MPH.
2. Approach the obstacle head-on.
3. Lift up slightly off the seat.
4. Keep your weight on the footrests.
5. Apply a slight amount of throttle when the front tires make contact with the obstacle.
6. Lean forward and release the throttle when the front tires clear the obstacle.
7. Keep your body loose to absorb any shock from going over the obstacle.
8. If the ATV begins to tip, shift your weight to maintain balance.



## Getting To Know Your ATV

To clear a single-track (only one tire contacts the obstacle) hazards, follow the same guidelines, except:

1. Use the ATVs momentum to clear the obstacle.
2. Do not pull up on the handlebar.
3. Do not apply any throttle.



## Crossing Through Shallow Water



### WARNING

Operating this vehicle through deep or fast flowing water can lead to loss of control or an overturn. To reduce your risk of drowning or other injuries, use care when crossing through water. Never operate this ATV water deeper than the depth specified in your Operator's Manual, as tires may float, increasing the risk of an overturn.

The ATV can be used to cross slow moving, shallow water up to the bottom of the running boards. Before entering the water, choose your path carefully. Enter where there is no sharp drop off, and avoid rocks or other obstacles, which may be slippery or upset the ATV. Drive slowly and carefully.

Test your brakes after leaving the water. If necessary, apply them several times to let the friction dry out the linings. Do not continue to ride your ATV without verifying that you have regained proper braking ability.



### WARNING

Wet brakes may have reduced stopping ability, which could cause loss of control.

After riding your ATV in water, be sure to drain the trapped water by removing the check hose at the bottom of the air filter case to drain any water that may have accumulated.



### CAUTION

Riding your ATV through water deeper than the footrests may lead to severe engine damage due to water ingestion.

## Getting To Know Your ATV

### Sliding and Skidding



#### **WARNING**

Skidding or sliding improperly may cause you to lose control of this ATV. You may also regain traction unexpectedly, which may cause the ATV to overturn.

Care should be used when riding on loose or slippery surfaces since the ATV may slide. If unexpected and uncorrected, sliding could lead to an accident.

To reduce the tendency for the front wheels to slide in loose or slippery conditions, positioning your weight over the front wheels will sometimes help.

If the rear wheels of your ATV start to slide sideways, control can usually be regained by steering in direction of the slide. Applying the brakes or accelerating is not recommended until you have corrected the slide.

With practice, over a period of time, skill at controlled sliding can be developed. The terrain should be chosen carefully before attempting such maneuvers since both stability and control are reduced.

Bear in mind that sliding maneuvers should always be avoided on extremely slippery surfaces, such as ice, since all control may be lost.

### Crossing Roads

Use extreme caution while crossing a road, avoid if at all possible. If you must cross a road:

1. Stop completely before crossing a road.
2. Check both directions for oncoming traffic.
3. NEVER attempt to cross a road or intersection at a blind crossing.
4. Drive straight across to the opposite side.
5. Allow plenty of time to safely cross the road.
6. Know your state and local laws. It is illegal to cross public roads in some places.

### Cold Weather Operation

**NOTE: Ensure all control levers operate as intended. Make sure the footrests are free and clear of ice and snow.**



#### **WARNING**

For your personal safety, it is important to wear the proper type and amount of cold-weather clothing according to the coldest anticipated temperatures.

1. With the transmission in neutral ("N") and the brake lever lock released, move the ATV forward and backward to ensure the wheels roll freely. If the ATV does not move, the tires may be frozen to the ground or the brake pads may be frozen to the rotors or drums.
2. If the tires are frozen to the ground, pour warm water around them to melt any ice around the tires.



#### **CAUTION**

Before operating, manually move the ATV forward and backward to ensure the wheels roll freely.

## Getting To Know Your ATV

3. If the brakes are frozen, move the ATV to a warm location to thaw out the brakes.



### WARNING

For your personal safety, do not attempt to free frozen brakes by pouring warm water on the brakes.

**NOTE:** After the brakes have thawed, dry them by compressing the brake lever several times while riding slowly.

**NOTE:** After riding through snow, slush, water or mud, it is recommended to dry the brake system before parking the ATV.



### WARNING

For your personal safety, go slow and be extra careful while riding on snow or ice-covered terrain. Always be alert to the changing terrain while operating the ATV.

1. Practice driving in an open snow or ice-covered area at slow speeds.
2. Learn how the ATV responds to steering and braking on snow or ice-covered terrain.

## Braking

Practice starting and stopping at slow speeds. Gradually work up to faster starts and stops.

1. Steer straight ahead. Close the throttle completely, remove your thumb from the throttle lever.
2. To apply both the front and rear brakes, compress the left hand brake lever located on the handlebars or depress the foot brake pedal to apply the rear brakes.

Gradually increase the lever pressure as you feel the brakes slowing your speed. The pressure used depends on your speed and the condition of the terrain you are riding. Slick, slippery or muddy ground requires gentler braking.

Compressing the brake lever too hard may cause the front and/or rear wheels to skid or slide out of control. If this happens, release all pressure on the lever immediately. Steer straight ahead to regain control. Then gently reapply the brakes.

Independent use of only the front or rear brakes reduces stopping performance. Extreme braking may cause the wheels to lock, reducing control of the ATV.

When possible, reduce speed or brake before entering a turn. Closing the throttle or braking in mid-turn may cause wheel slippage which will reduce control of your ATV.

Never hold the brake and accelerate at the same time. This will cause the brake system to overheat.

## Reversing

Remember, it is difficult to see behind you as you back up your ATV.

1. Proceed slowly, using a slight amount of throttle.
2. Keep the handlebar straight.
3. Avoid backing down hills; use a U-turn or a K-turn to turn around.

## Getting To Know Your ATV

### Parking

Parking requires following the previous rules of braking; then:

1. When the ATV comes to a complete stop, shift ATV into the “P” (Park) position.
2. Stop the engine using the engine stop switch located on the handlebar.
3. Turn the ignition switch to the “OFF” position.
4. Engage the parking brake lock.

**NOTE: If parking on a hill or slope, shift the ATV into forward or reverse gear.**



Parking brake lock

Brake lever

### Parking on a Hill or Slope

1. Bring the ATV to a complete stop by applying the brakes.
2. Stop the engine.
3. With the rear brake applied, shift ATV into the “P” (Park) position.
4. Engage the parking brake lock.



Parking brake lock

Brake lever



## WARNING

### POTENTIAL HAZARD

Parking on a hill or other incline.

### WHAT CAN HAPPEN

ATV could roll out of control, increasing the risk of an accident or injury.

### HOW TO AVOID THE HAZARD

Whenever possible, avoid parking on hills or other inclines. If you must park on an incline, shift the ATV into the park “P” position. Apply the parking brake, and block the front and rear wheels with rocks or other objects.

Do not park the ATV at all on hills that are so steep you could not walk up them easily.

### Stopping the Engine

To stop the engine, slide the emergency stop switch to the “OFF” position or turn the ignition switch key to the “OFF” position.

**NOTE: If you stop your ATV by turning the emergency stop switch to the “OFF” position, be sure to turn the ignition switch to the “OFF” position to prevent battery discharge.**

## Getting To Know Your ATV

### Trailer and Towing



#### WARNING

Never use the cargo racks as a towing or trailering point.

Your ARGO ATV is equipped with a frame-mounted receiver for a standard 2 inch (5.1 cm) receiver hitch. A standard receiver hitch must be purchased separately.

When loading a trailer properly, two items are critical. Gross Trailer Weight (the weight of the trailer PLUS the weight of the cargo) and Trailer Tongue Weight. See the Specification section.



#### WARNING

Ensure the load in the trailer is properly secured and will not shift while moving. Also, do not overload the trailer's capacity.



#### WARNING

#### NEVER EXCEED ANY OF THE ATVs WEIGHT RESTRICTIONS

Trailer Tongue Weight is the downward force exerted on the hitch by the trailer coupler when the trailer is fully loaded and the coupler is at its normal towing height. Refer to the Specifications section of this manual for tongue weight information.

Always maintain a slow speed when trailering and towing, and avoid sudden accelerations, quick maneuvers, and sudden stops. Braking distance will be affected when towing a trailer. When towing a trailer, always maintain slow speed and allow for more stopping distance than when not towing a trailer.



#### WARNING

Riding your ATV while towing a trailer requires extreme caution or the activity will be hazardous. Trailer towing will affect the handling and braking of your ATV. You should only tow at low speeds and never exceed 10 MPH. Avoid sudden accelerations and stopping. Do not make quick maneuvers. Avoid uneven surfaces and do not tow on hills. Never carry passengers in a trailer unless the trailer is designed for use and has a rigid tow bar. Allow for more stopping distance when towing a trailer.

## Getting To Know Your ATV

### Transporting Your ATV

When transporting your ATV, ARGO recommends to set the ATV in its normal operating position (level, on all four wheels) and use the following procedure:

1. Shift the ATV into the "P" (Park) position and engage the parking brake.
2. Secure the ATV with hold-down straps rated to hold a load in excess of the weight of your ATV.

**NOTE: Suitable hold-down straps are available from your ARGO ATV dealer. Ordinary rope is not recommended because it will stretch under load.**



### **CAUTION**

When attaching hold-down straps, care must be taken not to damage the ATV.

When transporting the ATV, make sure the parking brake (brake lever lock) is engaged, the transmission is in forward gear, and the ATV is properly secured.

## Getting To Know Your ATV

### **WHAT TO DO IF**

This section is designed to be a reference guide only. Be sure to read each section on riding techniques completely.

### **WHAT TO DO....**

#### ***If your ATV doesn't turn when you want it to:***

Bring the ATV to a stop and practice the turning maneuvers again. Be sure you are putting your weight on the footboard to the outside of the turn. Position your weight over the front wheels for better control.

#### ***If your ATV begins to tip while turning:***

Lean more into the turn to regain balance. If necessary, gradually let off the throttle and /or steer to the outside of the turn.

#### ***If your ATV starts to slide sideways:***

Steer in the direction of the slide if you have the room. Applying the brakes or accelerating is not recommended until you have corrected the slide.

#### ***If your ATV can't make it up a hill you are trying to climb:***

Turn the ATV around if you still have forward speed. If not, stop, dismount on the uphill side of the ATV and physically turn the ATV around. If the ATV starts to slip backwards DO NOT USE THE REAR BRAKE - the ATV may tip over on top of you. Dismount the ATV on the uphill side.

#### ***If your ATV is traversing a sloping surface:***

Be sure to ride with your weight positioned towards the uphill side of the ATV to maintain proper balance. If the ATV starts to tip, steer down the hill (if there are no obstacles in your way) to regain balance. If you discover that the ATV is going to tip over, dismount on the uphill side.

#### ***If your ATV encounters shallow water:***

Ride slowly and carefully through slow moving water, watching for obstacles. Be sure to let water drain from the ATV and CHECK YOUR BRAKES FOR PROPER OPERATION when you come out of the water. Do not continue to ride your ATV until you have regained adequate braking ability.

## SECTION 6

### Before You Ride

#### Engine Break-In

There is never a more important period in the life of your ATV than the first 10 hours of operation. Always use a light throttle, keeping engine RPM well below the maximum. Varying the engine RPM during the break-in period allows the engine and transmission components to mate together so they will operate smoothly in the future. Applying some higher engine RPM and other loads during the break-in period is not detrimental when done in moderation. Do not pull a trailer or haul heavy cargo during the break-in period.

When the engine starts, allow it to warm up properly. Permit the engine to idle for several minutes until it has reached normal operating temperature. However, do not allow the engine to idle for excessively long periods of time, as this additional heat can affect future engine integrity.



#### CAUTION

**BRAKE PADS MUST BE BURNISHED TO ACHIEVE FULL BRAKING EFFECTIVENESS.**

Braking distance will be greater until the brake pads are properly burnished.

To properly burnish the brakes, use the following procedure:

1. Choose an area sufficient to safely accelerate to 30 mph and smoothly brake to a stop.
2. Accelerate to 30 mph, then compress the brake levers to decelerate to 0-5 mph.
3. Repeat procedure 10 times.
4. Stop the vehicle and allow the brake pads to cool to ambient temperature.



#### WARNING

Do not attempt sudden stops or put yourself into a situation with your ATV where a sudden stop will be required until the brake pads are properly burnished.

After the completion of the break-in period, your ATVs engine oil and filter should be changed. Other maintenance after break-in should include checking all prescribed adjustments and tightening all fasteners. It is your responsibility as the owner and rider of your ATV to arrange for and pay for this initial service.

Because of the technical ability and resources available at an authorized ARGO dealer, it is best to take your ATV to the dealer for service rather than attempting to perform this initial service yourself.

#### Pre-Operation Checks

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition.

Always follow the inspection and maintenance procedures and schedules described in your Operator's Manual.



#### WARNING

Failure to inspect or maintain the vehicle properly increase the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by the dealer.



## Operation - Before You Ride

Before operating this ATV, check the following points:

ITEM	ROUTINE
Fuel	<ul style="list-style-type: none"><li>• Check fuel level in fuel tank and add recommended fuel if necessary.</li><li>• Check fuel line for leakage. Correct if necessary.</li></ul>
Engine Oil	<ul style="list-style-type: none"><li>• Check oil level in engine and add recommended oil to specified level if necessary.</li><li>• Check ATV for oil leakage. Correct if necessary.</li></ul>
Differential/Rear Drive Gear Oil	<ul style="list-style-type: none"><li>• Check oil level in differential / rear drive and add recommended oil to specified level if necessary.</li><li>• Check ATV for oil leakage. Correct if necessary.</li></ul>
Coolant	<ul style="list-style-type: none"><li>• Check coolant level and add recommended coolant to specified level if necessary.</li><li>• Check ATV for coolant leakage. Correct if necessary.</li></ul>
Brakes	<ul style="list-style-type: none"><li>• Check operation, if soft or spongy, have the dealer bleed the hydraulic system.</li><li>• Check brake pads for wear and replace if necessary.</li><li>• Check brake fluid level in reservoir and add recommended brake fluid to specified level if necessary.</li><li>• Check hydraulic system for leakage. Correct if necessary.</li></ul>
Throttle Lever	<ul style="list-style-type: none"><li>• Ensure smooth operation. Lubricate cable and lever housing if necessary.</li><li>• Check lever free play and adjust if necessary.</li></ul>
Drive Select Lever	<ul style="list-style-type: none"><li>• Ensure smooth operation. Lubricate lever pivoting point if necessary.</li></ul>
Wheels and Tires	<ul style="list-style-type: none"><li>• Check wheel condition and replace if damaged.</li><li>• Check tire condition and tread depth. Replace if necessary.</li><li>• Check air pressure. Correct if necessary.</li></ul>
Brake Levers	<ul style="list-style-type: none"><li>• Ensure smooth operation. Lubricate lever pivoting point if necessary.</li></ul>
Chassis Fasteners	<ul style="list-style-type: none"><li>• Ensure all nuts, bolts and screws are properly secured.</li></ul>
Instruments, Lights and Switches	<ul style="list-style-type: none"><li>• Check operation and correct if necessary.</li></ul>

## Operation - Before You Ride

### Front and Rear Hydraulic Brakes

#### 1. Hand Brake Lever and Foot Pedal

Make sure there is no brake fluid leakage.

Check operation of the levers. They should move smoothly and there should be a firm feeling when the brake is applied. If not, have the ATV inspected by an authorized ARGO dealer.

#### 2. Brake operation

Test the brakes at slow speed after starting out to make sure they are working properly. If the brakes do not provide proper braking performance, inspect the brakes for wear.



### WARNING

#### POTENTIAL HAZARD

Riding with improperly operating brakes.

#### WHAT CAN HAPPEN

You could lose braking ability, which could lead to an accident.

#### HOW TO AVOID THE HAZARD

Always check the brakes at the start of every ride. Do not ride the ATV if you find any problem with the brakes. If a problem cannot be corrected by the adjustment procedures provided in this manual, have the ATV inspected by an authorized ARGO dealer.

### Fuel

Fill the fuel tank when necessary and make sure there is sufficient gasoline in the tank.


Check for leaks.

Fuel level should be below the filler neck.

#### Recommended Fuel

87 minimum octane rating

Tank Capacity: 5.5 gal (21 L)

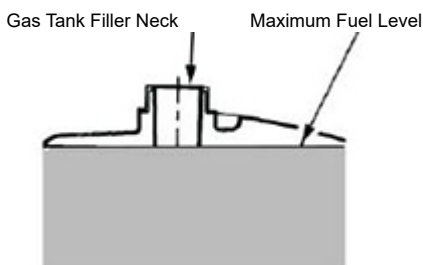

Your ARGO engine has been designed to use regular unleaded gasoline with a pump octane number of 87 or higher. In many areas, oxygenates (either ethanol or MTBE) are added to the gasoline. Oxygenated gasolines containing up to 10% ethanol, 5% methane, or MTBE are acceptable fuel. If knocking or pinging occurs, use a different brand of gasoline or premium unleaded fuel. Unleaded fuel will give you longer spark plug life and reduced maintenance cost.

Use unleaded fuel only because it produces fewer engine and spark plug deposits and extends the life of the exhaust system. Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust or water in the fuel tank.

## Operation - Before You Ride



### WARNING

#### POTENTIAL HAZARD

Improper care when refueling.

#### WHAT CAN HAPPEN

Fuel can spill, which can cause a fire and severe injury.

#### HOW TO AVOID THE HAZARD


Do not overfill the fuel tank. Be careful not to spill fuel, especially on the engine or exhaust pipe. Wipe up any spilled fuel immediately. Be sure the fuel tank cap is closed securely. Do not refuel immediately after the engine has been running and is still very hot.

## Engine Coolant Reservoir

Coolant absorbs heat from the engine and transfers it to the air at the radiator. If the coolant level becomes low, the engine overheats and may suffer damage. Check the coolant level each day before operating the ATV, and replenish coolant if the level is low. Change the coolant in accordance with the Maintenance Schedule.

### Coolant Level Inspection

1. Position the ATV on level ground.
2. Remove the two fasteners (1); then remove the front cover (2).
  1. Fasteners
  2. Front Cover
3. Check the coolant level in the coolant reservoir when the engine is cold as the coolant level will vary with the engine temperature. The coolant level should be between the minimum and maximum marks.
4. If the level is low, remove the coolant reservoir cap and add coolant or distilled water to raise it to the specified level.

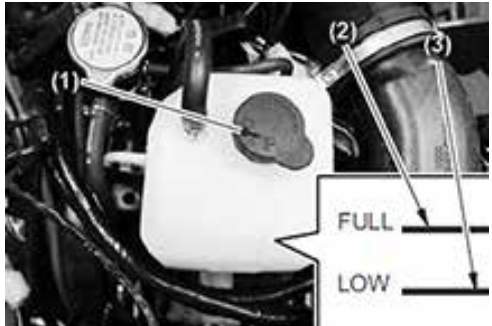

1. Coolant Reservoir Cap
2. Maximum Level Mark
3. Minimum Level Mark

**NOTE:** If water is added, have an **ARGO dealer** check the antifreeze content of the coolant as soon as possible.

The radiator fan operation is completely automatic. It is switched on or off according to the coolant temperature in the radiator.



### CAUTION


Hard water or salt water is harmful to the engine. You may use distilled water if soft water is not available.

## Operation - Before You Ride

### Engine Oil

Make sure the engine oil is at the specified level. Add oil as necessary. Check for any leaks.

**Recommended engine oil classification:** API Service SJ type or higher. The recommended oil viscosity is SAE 5W-30. Ambient temperature should determine the correct weight of oil. See the viscosity chart or consult an authorized ARGO dealer for guidance.

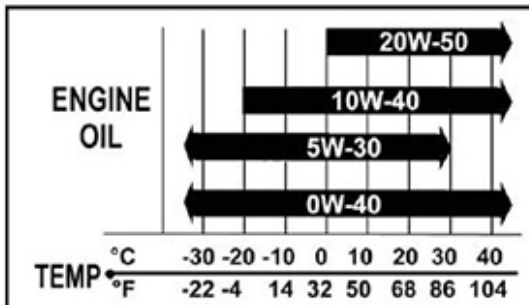


### CAUTION

Be sure to use motor oils that do not contain anti-friction modifiers. Passenger car motor oils (often labeled “Energy Conserving”) contain anti-friction additives which will cause starter clutch slipping, resulting in reduced component life and poor engine performance.

### Oil Level Inspection

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position.

1. Check the oil level through the inspection window.
2. The oil level should be between the maximum “H” mark and minimum “L” mark.  
If the level is low, add specified oil to raise it to the proper level.

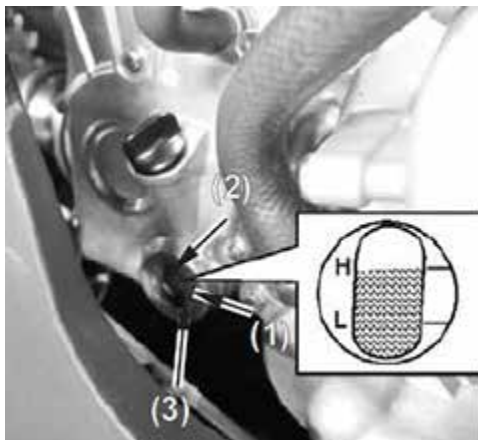

1. Engine Oil Inspection Window
2. Maximum Level Mark “H”
3. Minimum Level Mark “L”


### CAUTION

Do not overfill the engine with oil. Overfilling the engine can cause oil leaks and/or oil contamination of the air filter element. Always make sure the oil level is above the “L” mark but not higher than the “F” mark.

## Operation - Before You Ride

### To add engine oil:

1. Remove the oil fill cap (1).
2. Add appropriate type and amount of oil; then install the oil fill cap. Tighten securely.
3. Check the oil level through the inspection window.
4. The oil level should be between the maximum "H" mark and minimum "L" mark.  
If the level is low, add specified oil to raise it to the proper level.

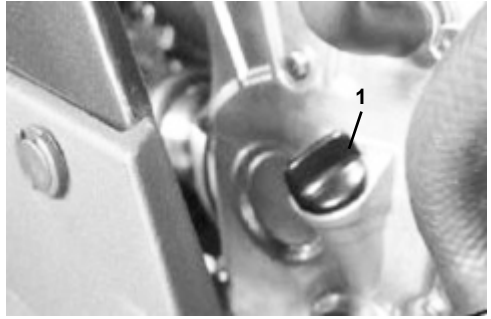

## Rear Gear Case Oil Inspection



### CAUTION

Any lubricant used in place of the recommended lubricant may cause serious damage.

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the "OFF" position.

1. Remove the oil level check bolt / washer (2).
2. Ensure oil level reaches the oil level check hole.
3. Install the oil level check bolt / washer. Tighten to 15 ft lb (20 N-m).



1. Oil Filler Bolt
2. Oil Level Check Bolt/Washer



### CAUTION

Ensure no foreign material enters the gear case.

## Operation - Before You Ride

### To add rear gear case oil:

1. Remove the oil fill bolt (1).
2. Add appropriate type and amount of oil.
3. Remove the oil level check bolt (2).
4. Ensure oil level reaches the oil level check hole.
5. Inspect O-ring for damage. Replace if necessary.
6. Install the oil fill cap and the oil level check bolt. Tighten oil fill cap to 11 ft lb (15 N-m). Tighten the oil level check bolt to 15 ft lb (20 N-m).

### Front Gear Case Oil Inspection



#### CAUTION

Any lubricant used in place of the recommended lubricant may cause serious damage.

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the "OFF" position.

1. Remove the oil level check bolt (1).
2. Ensure oil level reaches the oil level check hole.
3. Inspect O-ring for damage. Replace if necessary.
4. Install the oil level check bolt. Tighten to 7.2 ft lb (10 N-m).

(2)



(1)

1. Oil Level Check Bolt
2. Oil Fill Bolt



#### CAUTION

Ensure no foreign material enters the gear case.

### To add front gear case oil:

1. Remove the oil fill bolt (2).
2. Remove the oil level check bolt (1).
3. Ensure oil level reaches the oil level check hole.
4. Add appropriate type and amount of oil.
5. Inspect O-ring for damage. Replace if necessary.
6. Install the oil fill bolt and the oil level check bolt. Tighten oil fill bolt to 11 ft lb (15 N-m). Tighten the oil level check bolt to 7.2 ft lb (10 N-m).

## **Operation - Before You Ride**

### **Throttle Lever**

Check to see that the throttle lever operates correctly. Throttle must open smoothly and spring back to the idle position when released. Adjust as necessary for proper operation.

### **Fittings and Fasteners**

Always check chassis fittings and fasteners to ensure they are tight and secure. Take the ATV to an authorized ARGO dealer or refer to the Service Manual for correct torque specifications.

### **Lights**

Check the headlight, taillight and brakelight to ensure they are in proper operating condition. Repair as necessary for proper operation.

### **Switches**

Check the operation of the headlight switch, emergency stop switch and any other switches. Repair as necessary for proper operation.

### **Tires**

1. The tires listed below have been approved by ARGO for this model. Other tire combinations are not recommended.

### **How to Measure Tire Pressure**

Use the low-pressure tire gauge found in the tool kit.

**NOTE: The low-pressure tire gauge is included as standard equipment. Make two measurements of the tire pressure and use the second reading. Dust or dirt in the gauge could cause the first reading to be incorrect.**



## **WARNING**

### **POTENTIAL HAZARD**

Operating this ATV with improper tires, or with improper or uneven tire pressure.

### **WHAT CAN HAPPEN**

Use of improper tires on this ATV, or operation of this ATV with improper or uneven tire pressure, may cause loss of control, increasing the risk of an accident.

### **HOW TO AVOID THE HAZARD**

Follow the recommended tire pressures in the Operator's Manual.

## Operation - Before You Ride

### Set tire pressure to the following (tires cold):

**Recommended Tire Pressure:**

**EPS Models:**

Front: 5.0 psi (35 kPa)

Rear: 4.5 psi (32 kPa)

**LE Models:**

Front: 5.0 psi (35 kPa)

Rear: 5.0 psi (35 kPa)




1. Low-pressure tire gauge

### **Tire Wear Limit**

When the tire groove decreases to 0.16 in (4 mm) due to wear, replace the tire.

A. 0.16 in (4 mm)

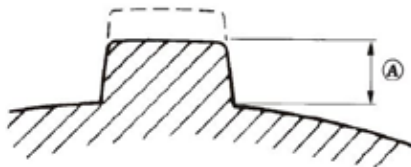

## **WARNING**

### **POTENTIAL HAZARD**

Operating this ATV without being familiar with all controls and functions.

### **WHAT CAN HAPPEN**

Loss of control, increasing the risk of an accident or injury.

### **HOW TO AVOID THE HAZARD**

Read the Operator's Manual carefully. If there is a control or function you do not understand, contact an authorized ARGO dealer.



## NOTES

## SECTION 7

### Operation

Always wear the following to reduce risk of injury in an accident:

- Approved motorcycle helmet that fits properly.
- Eye protection (goggles, helmet face shield or protective eyewear)
- Over the ankle boots, gloves, long sleeved shirt or jacket and long pants.

An approved helmet and other personal protective equipment can reduce the severity of injuries in an accident.



#### WARNING

**Operating without an approved motorcycle helmet increases your chances of a severe head injury or death in the event of an accident.**

Wear eye protection when operating your ATV to reduce the risk of a serious accident or injury. Eye protection such as a face shield or goggles may reduce the risk of foreign material getting in your eyes and help prevent loss of vision.



#### WARNING

**Operating without eye protection can result in an accident and increases your chances of a severe injury in the event of an accident.**

#### **Mounting the ATV**

1. From the left side, grasp the left-side handlebar, apply the left-side hand brake, and put your left foot on the footrest.
2. Grasp the right-side handlebar.
3. Swing your right leg over the seat and position your right foot on the right-side footrest.



#### CAUTION

**Note the position of your right foot so it is not resting or applying pressure to the rear foot brake. Premature brake failure may occur.**

4. Position yourself on the seat.
5. Always keep your feet positioned in the footrests and hands on the handlebars.

#### **Starting the Engine**

Always start the engine with the ATV on a flat, level surface. Always start your ATV outside as it produces Carbon Monoxide poisoning which will cause harm. Follow these steps to start your ATV:

1. Engage the parking brake lock on the left-side handlebar.
2. Turn the emergency stop switch to “RUN” position.
3. Rotate the ignition switch key to the “ON” position.
4. Shift ATV into the “N” (Neutral) or “P” (Park) position.

**NOTE: The engine can be started in any gear if the brake lever is applied. However, it is recommended to shift into “N” (Neutral) or “P” (Park) before starting the engine. If either indicator light fails to illuminate when the gear select lever is in the neutral or park position, have an ARGO dealer inspect the electrical circuit.**

## Operation

- Depress the starter button.



### CAUTION

Do not run the starter motor for more than 5 (five) seconds per starting attempt as the starter motor may overheat causing severe damage. Allow 10 (ten) seconds between starting attempts to allow the starter motor to cool. Pay attention not to discharge the battery.

**NOTE:** If the battery voltage is low, engine cannot be started. Properly charge the battery.

- Do not depress the throttle lever until the engine has reached operating temperature.
- Allow the engine to properly warm up. If the engine has not reached proper operating temperature, the spark plug may not have reached a high enough temperature to burn off the excess fuel in the combustion chamber.

## Warming Up Engine

To get maximum engine life, always warm up the engine. Never accelerate hard with a cold engine! To see whether or not the engine is warm, check if it responds to the throttle normally.



### CAUTION

- Do not operate the throttle (open and close rapidly) as the ATV may move forward suddenly, causing possible loss of control.
- Do not leave the ATV unattended while the engine is warming up.

## Braking / Stopping

Always allow plenty of room and time to stop your ATV safely. Be alert and prepared, as sometimes quick stops are inevitable. Whether you are stopping slowly or stopping quickly, follow these braking guidelines:

- Squeeze the brake lever on the left handlebar to apply the front and rear brakes or depress foot brake to apply the rear brakes.
- If your wheels lock, release the brake lever, then apply the brakes again.
- Avoid prolonged application of the brakes. Even maintaining minimal pressure on the brake lever will cause the brake pads to drag on the brake rotor and may cause overheating of the brake fluid.



### WARNING

Prolonged and repetitive use of the ATVs hydraulic brake for high speed stops will cause overheating of the brake fluid and premature brake pad wear which can cause unexpected loss of braking ability. Note the position of your right foot so it is not resting or applying pressure to the rear foot brake. Premature brake failure may occur.



### WARNING

Use only ARGO approved brake fluid. Never substitute or mix different types or grades of brake fluid, as unexpected loss of braking ability can result. Check the ATVs brake fluid level and pad wear before each use. The loss of braking ability can result in severe injury or even death.

## Operation

### Transmission Ranges

This ATV is equipped with an automatic, dual-range transmission with reverse capability. To shift your ATV into the different drive ranges, follow the below steps.

To properly change transmission range:

1. Apply brake.
2. Move shift lever to the desired range.
3. Release brake.

**NOTE:** The **HIGH** range is for normal riding conditions with light loads. The **LOW** range is for carrying heavy loads, slow speeds or trailer towing. **LOW** range position provides slower speed and greater torque to the wheels.



### CAUTION

Always shift the transmission into **LOW** range when operating on wet or uneven terrain, when towing or pushing heavy loads, or when using a plow. Failure to follow this caution may result in premature V-belt failure or other damage to the drive system.



### CAUTION

Never shift the transmission while your ATV is in motion. Should your ATV be on a surface that is not level, engage the parking brake lock before shifting into another gear or into reverse.



### WARNING

Do not start the engine or operate your ATV with the clutch shield removed. Severe injury could result.

### Parking

Parking requires following the previous rules of braking; then:

1. When the ATV comes to a complete stop, shift ATV into the “P” (Park) position.

**NOTE:** Always try to park your ATV on level ground. If you have to park on a hill, shift the ATVs transmission into the “P” (Park) position.

2. Stop the engine using the emergency stop switch located on the handlebar.
3. Turn the ignition switch to the “OFF” position.
4. Engage the parking brake lock.

### Dismounting the ATV

1. Double-check that the parking brake lock is engaged.
2. Swing your right leg over to the left side of the seat.
3. Step to the ground on the left side of the ATV.

## NOTES

## SECTION 8

### General Maintenance

**NOTE:** Proper maintenance of the ATV is extremely important for the safe operation and optimum performance. Follow the Maintenance Schedule and all ensuing maintenance instructions/information.

Inspection, adjustment and lubrication will keep your vehicle in the safest and most efficient condition possible.

Safety is an obligation of the vehicle owner/operator.



#### WARNING

Failure to properly maintain the vehicle may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a dealer perform the service.



#### WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.
- Running the engine while servicing can lead to eye injury, burns, fire or carbon monoxide poisoning or death.



#### WARNING

Brake discs and calipers can become very hot during use. To avoid possible burns, let brake components cool before touching them.

The intervals given in the scheduled maintenance charts should apply to normal riding conditions. However, **depending on the weather, terrain, geographical location and individual use, the maintenance intervals may need to be shortened.**

You may choose any qualified repair shop or person to maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall and all other services paid for by ARGO USA must be performed at an authorized ARGO USA service center which will complete repairs in a reasonable amount of time. ARGO USA service centers can provide all manner of service.

Ensure the service book is stamped and signed. Failure to do so could invalidate your warranty.

The maintenance schedule is based on months of use or kilometers/miles traveled, whichever comes first.

## Maintenance Schedule

Item	Initial 100 miles/150 Km 1 month	Every 600 miles/1000 Km 6 months	Every 1200 miles/2000 Km 12 months
Engine oil	R	R	
*Oil strainer	C,R	C,R	C,R
Engine oil filter	R	R	
Rear gear oil	I	E	I,R
Front differential gear oil	I	E	I,R
Air filter element (for engine and *V-belt compartment)	E	I,R	I,R
*Throttle body			I
*Cylinder head cover breather system		I,R	I,R
Spark plug	I,R	I,R	I,R
*Fuel line		I,R	I,R
*Valves	I	I	I
*Brake	I,R	I,R	I,R
*Coolant	I,R	I,R	I,R
*V-belt	I,R		I,R
*Exhaust system		I,T,R	I,T,R
Spark arrester		I	I
Tires / *Wheels	I,R	I,R	I,R
*Wheel bearings	I,R	I,R	I,R
*Steering system	I,R	I,R	I,R
*Drive shaft boots		I,R	I,R
*Suspension		I	I
Throttle cable, brake lever pivot points, steering shaft		L	L
*Fittings, fasteners and nuts	I	I	I
Lug nuts	T	T	T

**I** = Inspect, clean, adjust, lubricate, replace as necessary

**C** = Clean

**L** = Lubricate

**R** = Replace

**T** = Tighten

**E** = Extreme Conditions

**\*** = Dealer Maintenance

## General Maintenance

### Radiator

The radiator area requires to be checked periodically for debris. Inspect the radiator fins, they must be clean, free of mud, dirt, leaves and any other debris that would prevent the radiator to cool properly. Remove as much of the debris as possible with your hands. If water is available, use a low pressure to rinse the radiating fins. Do not use high pressure as it will damage the radiator.



### CAUTION

Never clean radiator with your hands when engine is hot. Let the radiator cool down before cleaning.

Do not use high pressure water to clean radiator, damage may occur.

### Shock Absorbers

Each shock absorber on your ATV should be visibly inspected weekly for excessive fluid leakage (some seal leakage is normal), cracks or breaks in the shock body, or a bent shock rod. If any of these conditions are present, replacement is necessary.

**NOTE: If you ride your ATV in extremely cold weather (-10° F/-23° C or colder), a small amount of fluid leakage may occur on the shock rod. Unless the leakage is excessive, replacement of the shock absorbers is not necessary.**

The shock absorbers have spring force adjustment sleeves with five positions to allow the spring rate to be adjusted for different riding conditions. If the spring rate is too soft or too stiff, adjust the sleeve according to the chart below.

**NOTE: Properly lift ATV off the ground to remove load on suspension before adjusting shock springs. Use a spanner wrench to adjust the spring force adjustment sleeve to the desired position.**



Position	Spring Force	Setting	Load
1	↓ Stronger	Soft	Light
2		↕ Stiff	↕ Heavy
3			
4			
5			



## General Maintenance

### General Lubrication


#### Cables

Under normal use, the cables do not require lubrication. However, it is advisable to lubricate the ends of the cables periodically with a quality cable lubricant.

#### Engine Oil Level Inspection

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position.

1. Check the oil level through the inspection window.
2. The oil level should be between the maximum “H” mark and minimum “L” mark.  
If the level is low, add specified oil to raise it to the proper level.

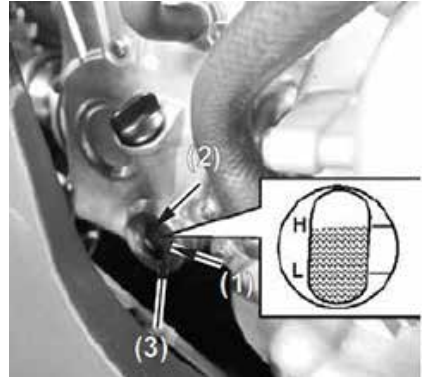

1. Engine Oil Inspection Window
2. Maximum Level Mark “H”
3. Minimum Level Mark “L”



### CAUTION

Do not overfill the engine with oil. Overfilling the engine can cause oil leaks and/or oil contamination of the air filter element. Always make sure the oil level is above the “L” mark but not higher than the “F” mark.

#### Engine Oil and Oil Filter Change

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position.

1. Warm up the engine for several minutes and stop the engine.
2. Place a suitable drain pan under the engine.
3. Remove the oil fill cap (1) and the oil strainer cap (2) to drain the oil.



(2)



### CAUTION

Ensure no foreign material enters the gear case.

## General Maintenance



### CAUTION

When removing the oil strainer cap, account for a compression spring, oil strainer and an O-ring. Do not lose these parts.


4. Clean the oil strainer with solvent.
5. Inspect the O-ring and replace if damaged.
6. Reinstall the O-ring, oil strainer, compression spring and oil strainer cap. Tighten to 11 ft lb (15 N-m).



### CAUTION

Before reinstalling the oil strainer cap, ensure O-ring, compressing spring and oil strainer are installed.

7. Remove the three fasteners (1) and then remove the right side cover (2).
8. Using a suitable oil filter wrench, remove the oil filter.

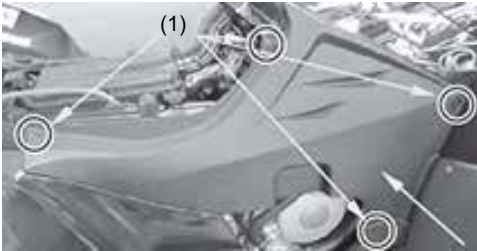


9. Apply a thin coat of clean engine oil to the O-ring of the new oil filter.

**NOTE: Ensure the O-ring is seated properly.**

10. Install the new oil filter.
11. Using an oil filter wrench, tighten the filter to 7.2 ft lb (10 N-m).

O-ring

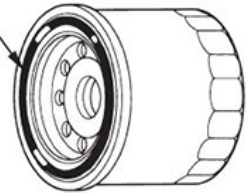

**NOTE: Clean up any excess or spilled oil after removing the oil filter.**

6. Install right side cover.
7. Pour the recommended amount and type of engine oil into the oil fill hole. Install the oil fill cap.
8. Check the oil level through the inspection window.
9. The oil level should be between the maximum "H" mark and minimum "L" mark. If the level is low, add specified oil to raise it to the proper level.

**NOTE: Dispose of the used oil and filter in an environmentally proper way.**

## General Maintenance

### Rear Gear Case Oil Inspection



#### CAUTION

Any lubricant used in place of the recommended lubricant may cause serious damage.

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position.

1. Remove the oil level check bolt / washer (2).
2. Ensure oil level reaches the oil level check hole.
3. Install the oil level check bolt / washer. Tighten to 15 ft lb (20 N-m).

(1)

(2)



1. Oil Filler Cap
2. Oil Level Check Bolt/Washer



#### CAUTION

Ensure no foreign material enters the gear case.

### Rear Gear Case Oil Change

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position to assure complete and rapid draining.

1. Remove the skid plate.
2. Place a suitable drain pan under the oil drain plug.
3. Remove the oil filler cap (1), then remove the oil level check bolt and washer (2).


**NOTE:** Inspect oil filler cap o-ring and oil level check bolt/washer for any damage. Replace as necessary.

Oil Drain Plug



(1)

(2)

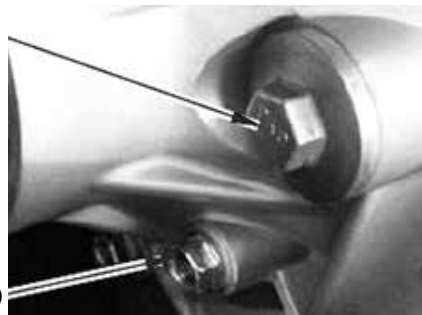

1. Oil Filler Cap
2. Oil Level Check Bolt/Washer



#### CAUTION

Inspect the oil for any signs of metal filings or water. If either are present, take your ATV to an authorized ARGO dealer for service.

## General Maintenance

- After the oil has completely drained, reinstall the oil level drain plug / washer. Tighten to 15 ft lb (20 N-m).
- Pour the recommended amount and type of gear case oil into the oil fill hole.
- Ensure oil level reaches the oil level check hole.
- Install the oil filler cap. Tighten to 11 ft. lb (15 N-m).  
Install oil level check bolt / washer. Tighten to 15 ft lb (20 N-m).
- Install the skid plate.

## Front Gear Case Oil Inspection




### CAUTION

Any lubricant used in place of the recommended lubricant may cause serious damage.

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position.

- Remove the oil level check bolt (1).
- Ensure oil level reaches the oil level check hole.
- Inspect o-ring for any damage.  
Replace if necessary.
- Install the oil level check bolt / o-ring. Tighten to 7.2 ft lb (10 N-m).

(2)

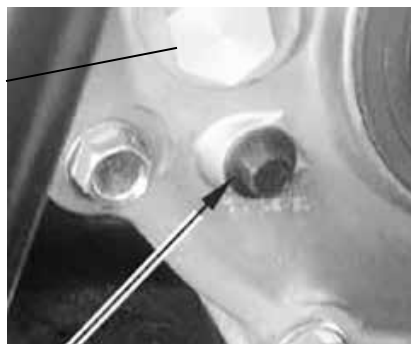

- (1)
- Oil Level Check Bolt/Washer
  - Oil Fill Bolt




### CAUTION

Ensure no foreign material enters the gear case.

## Front Gear Case Oil Change

**NOTE:** The ATV should be parked on level ground, with the engine key switch in the “OFF” position to assure complete and rapid draining.

- Place a suitable drain pan under the oil drain plug.
- Remove the oil filler bolt and oil drain plug bolt.
- Inspect o-ring for any damage. Replace if necessary.

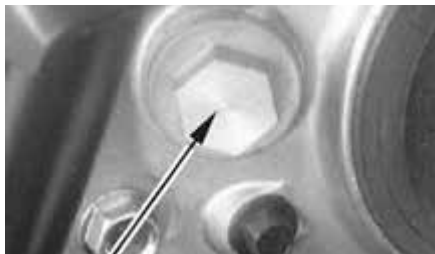

Oil Filler Bolt



Oil Drain Plug/Washer

## General Maintenance



### CAUTION

Inspect the oil for any signs of metal filings or water. If either are present, take your ATV to an authorized ARGO dealer for service.



4. After the oil has completely drained, reinstall the oil drain plug/washer. Tighten to 9 ft lb (12 N-m).
5. Pour the recommended amount and type of gear case oil into the oil fill hole.
6. Ensure oil level reaches the oil level check hole.
7. Install the oil level check bolt / o-ring. Tighten to 7.2 ft lb (10 N-m).
8. Install the oil filler bolt and o-ring. Tighten to 11 ft lb (15 N-m).



Oil Level Check Bolt

## Drive Select Lever Adjustment

1. Turn the ignition switch to the "ON" position and **DO NOT** start the engine.
2. Remove three fasteners (1), then remove the left side cover (2).
3. Loosen the locknuts (3) securing the shift rod (4). Move the drive select lever to the "N" (neutral) position by move the shift lever and/or turn the shift rod. The "N" (neutral) indicator lamp should be illuminated.

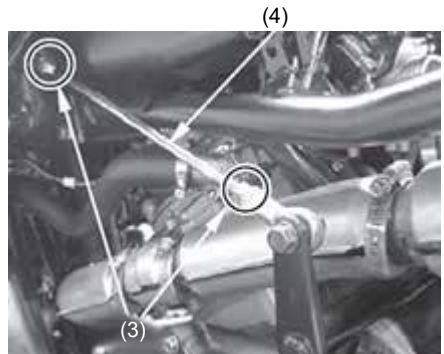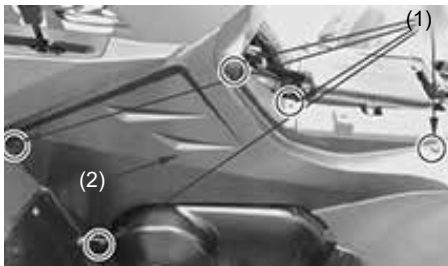


## General Maintenance

- Turn the shift rod either clockwise or counter-clockwise until the drive select lever indicator aligns into the "N" (neutral) position on the shift guide. Tighten the locknuts securely.



Drive  
Select

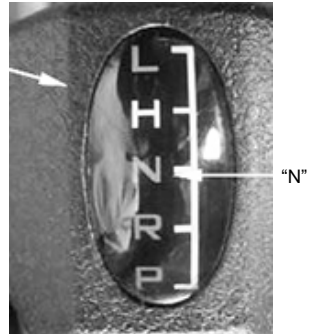

## Hydraulic Brake



### WARNING

Be sure to inspect the hydraulic brake system before every use. Always maintain the brakes and the brake fluid level according to the Maintenance Schedule.



Parking brake lock

Brake lever

## Brake Fluid

Check the brake fluid level in the brake fluid reservoir sight glass (right and left sides). If the level in the reservoir is below the lower level or not visible in the sight glass, add DOT 4 brake fluid.

**NOTE:** If the sight glass appears dark, there is an insufficient amount of brake fluid in the reservoir.



Brake Fluid  
Sight Window



### CAUTION

Be careful not to spill any brake fluid when filling the brake fluid reservoir. Brake fluid can damage the finish of plastic components. Wipe up any spilled brake fluid immediately.

## General Maintenance

### Rear Foot Brake


The rear foot brake must be maintained periodically to remain fully functional.



#### WARNING

Be sure to inspect the rear brake system before every use. Maintain the brakes according to the Maintenance Schedule.

**NOTE:** The brake fluid reservoir is located on the right rear frame.

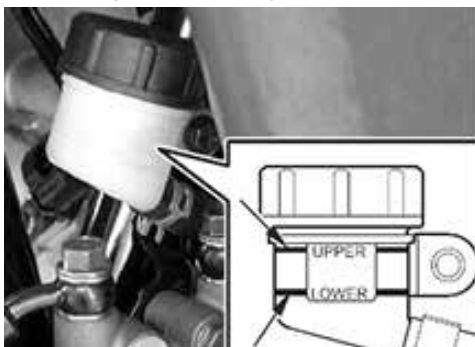

1. Press down on the rear brake pedal several times to check for firmness.
2. If the pedal response is not firm, the brake system must be bled.

**NOTE:** If the brake system requires bleeding, take your ATV to an authorized ARGO dealer for service.

### Brake Hoses

Carefully inspect the hydraulic hoses for cracks or other visible damage. If damage is found, take the ATV to an authorized ARGO dealer for service.

### Front / Rear Brake Pads

The clearance between the brake pads and brake discs is adjusted automatically as the brake pads wear. The only required maintenance is to replace brake pads when they become worn. To check the thickness of the brake pads, use the following procedure:

1. Park the ATV on level ground and engage the parking brake lock.
2. Loosen the wheel nuts on the front / rear wheel to be removed. Do not remove the wheel nuts from the wheel studs.
3. Using a suitable jack, elevate the ATV. Support the ATV on a support stand.



#### WARNING

Ensure the ATV is safely supported on the stand to avoid injury.

4. Remove the wheel nuts.
5. Remove the wheel.


## General Maintenance

6. Measure the thickness of each brake pad. If the thickness of the pads are less than 0.039 in (1 mm), take your ATV to an authorized ARGO dealer to have the brake pads replaced.
7. Install the wheel and install wheel nuts.
8. Tighten in a crisscross pattern to 45 ft-lb (61 N-m).
9. Remove the support stand and jack.



Front Brake



### Front Brakes

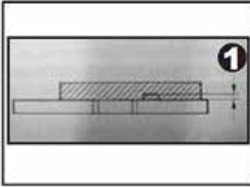

Brake Pad Wear Limit:  
0.039 in (1 mm)



### Rear Brakes

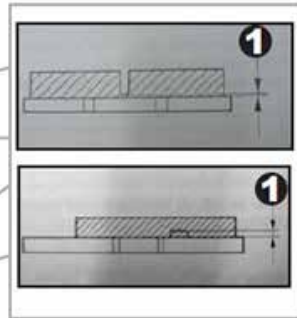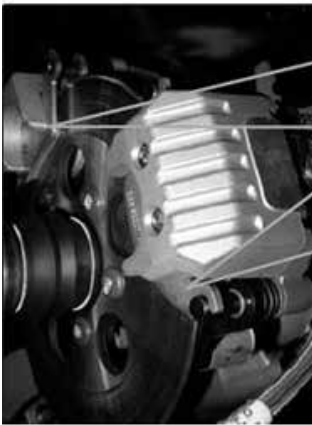

Brake Pad Wear Limit:  
0.039 in (1 mm)



## General Maintenance

### Protective Rubber Boots

The protective rubber boots over the drive shafts should be inspected periodically per the Maintenance Schedule.

### Ball Joint Boots (Upper/Lower and Left/Right)

1. Park the ATV on level ground and engage the parking brake lock.
2. Loosen the wheel nuts on the front wheels. Do not remove the wheel nuts from the wheel studs.
3. Using a suitable jack, elevate the ATV. Support the ATV on a support stand.



### WARNING

Ensure the ATV is safely supported on the stand to avoid injury.

4. Remove the wheel nuts.
5. Remove the wheel.
6. Inspect the four ball joint boots for cracks, tears, perforations, or any other visible damage.
7. Check the ball joint for free-play by grasping the steering knuckle and turning it from side to side, and up and down.
8. If boot damage is noted or ball joint free-play seems excessive, contact an authorized ARGO dealer for service.
9. Install the wheel and reinstall the wheel nuts.
10. Tighten the wheel nuts in a criss-cross pattern to 45 ft lb (61 N-m).
11. Remove the support stand and jack.

### Tie Rod Boots (Inner/Outer and Left/Right)

1. Park the ATV on level ground and engage the parking brake lock.
2. Loosen the wheel nuts on the front wheels. Do not remove the wheel nuts from the wheel studs.
3. Using a suitable jack, elevate the ATV. Support the ATV on a support stand.



### WARNING

Ensure the ATV is safely supported on the stand to avoid injury.

## General Maintenance

4. Remove the wheel nuts.
5. Remove the wheel.
6. Inspect the four tie rod boots for cracks, tears, perforations, or any other visible damage.
7. Check the tie rod end for free-play by grasping the tie rod near the end and attempting to move it up and down.
8. If boot damage is noted or tie rod end free-play seems excessive, contact an authorized ARGO dealer for service.
9. Install the wheel and reinstall the wheel nuts.
10. Tighten the wheel nuts in a criss-cross pattern to 45 ft lb (61 N-m).
11. Remove the support stand and jack.

## Drive Axle Boots

1. Inspect all drive axle boots for cracks, tears, perforations, or any other visible damage.
2. If boot damage is noted, contact an authorized ARGO dealer for service.



## Wheel Removal

1. Park the ATV on level ground and engage the parking brake lock.
2. Loosen the wheel nuts on the wheel to be removed. Do not remove the wheel nuts from the wheel studs.
3. Using a suitable jack, elevate the ATV. Support the ATV on a support stand.



### **WARNING**

Ensure the ATV is safely supported on the stand to avoid injury.

4. Remove the wheel nuts.
5. Remove the wheel.

## General Maintenance


### Wheel Installation

**NOTE:** When reinstalling a wheel, tighten the wheel nuts in a criss-cross pattern. Be sure the tapered side of the wheel nuts face the wheel rim.

1. Install the wheel and reinstall the wheel nuts.
2. Tighten the wheel nuts in a criss-cross pattern to 45 ft lb (61 N-m).
3. Remove the support stand and jack.

Front and Rear Wheel Nut Torque:  
45 ft lb (61 N-m).

**NOTE:** The arrow mark on the tire must point in the rotating direction of the wheel.

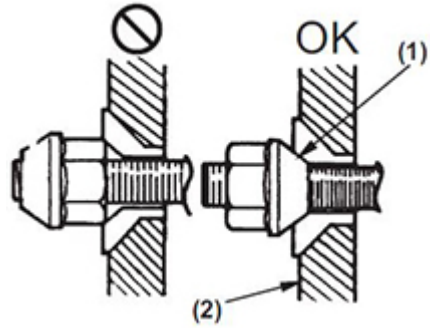

- (1) Wheel Nut  
(2) Wheel Rim

### Battery

The battery is located under the front hood panel of your ATV. After initial service, batteries require regular cleaning and recharging in order to deliver peak performance and maximum service life. Always read and follow instructions provided with battery chargers and battery products.

**NOTE:** You can perform your own battery maintenance if you are qualified to do so. If you do not feel qualified, take your ATV to an authorized ARGO dealer for battery service. As with all other periodic maintenance, you are responsible for any charges associated with these services.



### WARNING

#### POTENTIAL HAZARD

Allowing open flames or sparks near the battery.

#### WHAT CAN HAPPEN

Gases may explode and possibly cause injury.

#### HOW TO AVOID THE HAZARD

Do not allow open flames or sparks near the battery.

#### NOTE:

- When the ATV is to be stored for an extended period, remove the battery from the vehicle and charge it fully. Then store it in a cool, dry place. If the battery is to be left on the vehicle, disconnect the negative cable from the battery terminal.
- Battery posts, terminals and related accessories contain lead and lead compounds. Wash hands after handling.

## General Maintenance

### Battery Capacity:

1. Make sure the ignition switch is in the "OFF" position.
2. Remove the battery hold-down and then disconnect the battery cables.
3. Disconnect the negative (-) terminal lead from the battery first, then disconnect the positive (+) terminal lead.
4. Remove the battery from the battery compartment. Thoroughly wash the battery and the battery compartment with mild soap and water.

**NOTE: If the battery posts, cable ends, or the battery case has a buildup of white/green powder residue, apply water and baking soda mixture to neutralize the acid residue and rinse with warm soapy water.**

5. Use a wire brush to clean the battery posts and cable ends, remove all corrosive buildup. Replace any damaged cables.
6. Use a multimeter to test the battery voltage. The voltage for a fully charged battery should be at least 12.5 Volts DC.

**NOTE: If the meter indicates the proper voltage, the battery can be reinstalled into the battery compartment of the ATV.**

7. If the meter indicates low voltage, charge the battery using the guidelines below.



### WARNING

Any time service is performed on a battery, the following must be observed: keep sparks, open flame, cigarettes, or any other flame away. Always wear safety glasses. Protect skin and clothing when handling a battery. When servicing a battery in an enclosed space, keep the area well-ventilated. Make sure battery venting is not obstructed.

- A. When using an automatic battery charger, always follow the charger manufacturer's instructions.



### CAUTION

Never exceed the battery's standard charging rate.



### WARNING

An overheated battery from improper charging could explode causing severe injury or death. Always monitor charging times and charge rates carefully. Stop charging a battery if it becomes very warm to the touch. Allow it to cool before resuming any type of charging.



### CAUTION

To avoid damage from the ATVs electronic fuel injection components, do not remove or install a battery wire when the ignition switch is in the "ON" position.

8. After charging the battery for the specified amount of time, remove the battery charger and allow the battery to sit and cool for 1 to 2 hours.

## General Maintenance

9. Test the battery voltage again after the battery has cooled. The meter should read at least 12.5 Volts DC. If the voltage is as specified, the battery is ready to be reinstalled into the battery compartment of the ATV.

**NOTE: If the voltage in step 9 is below specifications, charge the battery an additional 1 - 5 hours and retest. If the voltage level is proper, then the battery can be reinstalled into the battery compartment of the ATV.**

10. Reinstall the battery into the battery compartment of the ATV and apply a light coat of dielectric grease on the battery posts and cable ends.



### CAUTION

Before installing the battery, ensure the ATVs ignition switch is in the "OFF" position.

11. Connect the battery cables (positive (+) cable first) and then the negative (-) cable.
12. Reattach the battery hold-down.



### CAUTION

Connecting the battery cables in reverse (positive (+) to negative (-) and negative (-) to positive (+)) can cause serious damage to the electrical system.

## Charging / Maintenance Charging

**NOTE: ARGO recommends the use of a battery charger/maintainer. Maintenance charging is required on all batteries not used for more than two weeks or as required by battery drain.**

1. When charging a battery in the vehicle, be sure the ignition switch is in the "OFF" position.
2. Clean the battery terminals with a solution of baking soda and water.

**NOTE: The sealing strip should NOT be removed and NO fluid should be added.**

3. Ensure the charger and battery are in a well-ventilated area and the charger is unplugged from the 110-volt electrical outlet.
4. Connect the red terminal lead from the charger to the positive (+) terminal of the battery; then connect the black terminal lead of the charger to the negative (-) terminal of the battery.
5. Plug the battery charger/maintainer into a 110-volt electrical outlet.
6. Follow charging instructions supplied with the charger/maintainer.

**NOTE: Not using a battery charger with the proper float maintenance will damage the battery if connected over extended periods.**

7. Once the battery has reached full charge, unplug the charger from the 110-volt electrical outlet.

**NOTE: If, after charging, the battery does not perform to operator expectations, bring the battery to an authorized ARGO dealer for further troubleshooting.**

## General Maintenance

### Jump-Starting

**NOTE:** ARGO does not recommend jump-starting a vehicle with a dead battery but rather to remove the battery, service it, and correctly charge it.



### WARNING

Improper handling or connecting of a battery may result in severe injury including acid burns, electrical burns, or blindness as a result of an explosion. Always remove rings and watches.



### WARNING

Any time service is performed on a battery, the following must be observed: keep sparks, open flame, cigarettes, or any other flame away. Always wear safety glasses. Protect skin and clothing when handling a battery. When servicing battery in enclosed space, keep the area well ventilated. Make sure battery venting is not obstructed.

### Spark Plug


Your ATV is equipped with a specific spark plug (see “Specifications” for the correct spark plug). The appearance of the insulator on a used spark plug will help determine if it is the proper one for your ATV.

A light brown insulator indicates that the spark plug is correct. A white or dark insulator indicates that the engine may need to be serviced or adjustments made. Consult an authorized ARGO dealer if the plug insulator is not a light brown color.

To help prevent cold weather fouling (a buildup of carbon and unburned fuel on the spark plug) make sure you thoroughly warm up your ATVs engine before riding.

Before inspecting a spark plug, clean the area around the spark plug to prevent any dirt from entering the engine when remove or installing the spark plug.

**Adjust the spark plug’s ground electrode gap to 0.024 - 0.028 in. (0.6 - 0.7 mm). Use a wire-type feeler gauge to check the gap.**

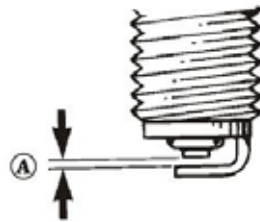

A. Spark plug gap

When installing a spark plug, be sure to tighten it securely. A new spark plug should be tightened 1/2 turn once the washer makes contact with the cylinder head. A used spark plug should be tightened 1/8 - 1/4 turn once the washer makes contact with the cylinder head.

## General Maintenance

### Throttle Cable Adjustment

Follow this procedure to adjust throttle cable free-play:

1. Slide the rubber boot (2) back and loosen the jam nut (3) from the throttle cable adjuster.
2. Turn the adjuster (4) until the throttle lever has the proper free-play of 0.12 - 0.2 in. (3 - 5 mm).




3. Tighten the jam nut against the throttle cable adjuster securely and slide the rubber boot back over the adjuster.

### Air Filter

The air filter inside the air filter housing must be kept clean to provide good engine power, gas economy and to prevent premature engine wear. If you use your ATV under normal conditions, service the filter at the intervals specified. If you ride it in dusty, wet, or muddy conditions, inspect and service the filter more frequently. Use the following procedure to remove the filter and then inspect and clean it.

1. Remove the seat.
2. Unlatch the six retainer clips (1) and remove the air cleaner housing cover (2).
3. Remove the pre-filter (3).

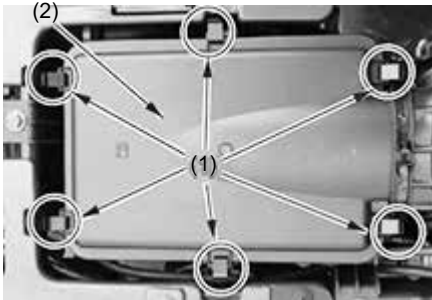

## General Maintenance

- Remove the air filter (4).
- Remove the air filter support screen (5).



### CAUTION

A torn air filter can cause damage to your ATVs engine. Dirt or dust may get inside the engine if the element is torn. Carefully inspect the element for tears before and after cleaning it. Replace the element with a new one if it is torn or damaged in any way.

- Fill an adequately sized wash pan with a non-flammable solvent and wash the pre-filter and air filter clean of debris.
- Squeeze the filters by pressing between the palms of both hands to remove excess solvent. Do not twist or ring-out the filter or you may damage it.
- Dry the filters.
- Place the element into a plastic bag, pour air filter oil into the bag and work the oil into the element.
- Squeeze the element to remove the excess oil.
- Clean any dirt or debris from inside the air filter housing. Be sure no dirt enters the throttle body.
- Reassemble by reversing the disassembly sequence.



### CAUTION

Do not twist the air filter when squeezing it.



## General Maintenance



### WARNING

#### POTENTIAL HAZARD

Using low flash point solvents or gasoline to clean the air filter.

#### WHAT CAN HAPPEN

Low flash point solvents or gasoline can catch fire or explode increasing the risk of an accident or injury.

#### HOW TO AVOID THE HAZARD

Use parts cleaning solvent to clean the air filter.

### **Air Filter Housing Drain**

It is recommended to occasionally drain any fluid that has accumulated in your ATVs air filter housing. Riding through water may require more frequent inspection. If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle. To clean the drain tube:

1. Remove the drain tube (1) by removing the clip (3).
2. Drain the deposits.
3. Reinstall the drain tube, securing it with the clip.




- (1) Drain Tube  
(2) Air Cleaner Housing  
(3) Clip

### **Draining the V-Belt Cover**

**NOTE:** If the ATV has been driven through water, the V-Belt cover must be drained of any liquid.

1. Place the ATV on a flat, level surface.
2. Remove the clamp securing the drain tube on the cover to allow liquid to drain out.
3. Position the shift lever to the neutral "N" position; then start the engine.
4. Increase and decrease the engine RPM several times to force out any additional liquid; then stop the engine.
5. Reinstall the drain tube and clamp.

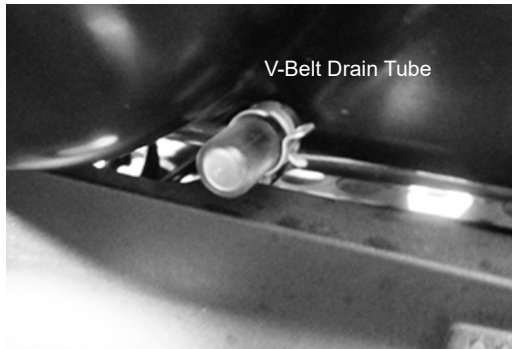

**NOTE:** The V-belt and pulleys should be inspected every 500 miles and the belt replaced when necessary.

## General Maintenance

### Tires



#### WARNING

Always use the size and type of tires specified for your ARGO ATV. Refer to the specifications chart in this manual for tire-related information and always maintain proper tire inflation pressure.

### Tire Replacement

This ATV has low-pressure tubeless tires. Air is sealed by the contact surfaces of the inner rim and the tire bead. If either the inner rim or tire bead are damaged, air may leak. Be extremely careful not to damage these areas when replacing tires. It is very important to use the proper tools when repairing or replacing tires to prevent damage to the tire, the tire bead or the rims. If you do not have access to the proper tools or lack the technical ability, have your tires serviced by an authorized ARGO dealer.



#### WARNING

The use of worn-out tires on your ATV can be dangerous and can increase the risk of an accident.



#### CAUTION

When breaking the tire bead loose from the rim, be extremely careful not to damage the inner rim surface or the tire bead.



#### WARNING

Use only ARGO approved tires on your ATV when replacing tires. Failure to do so could result in unstable ATV operation.

### Muffler / Spark Arrester

The muffler on this ATV is equipped with a spark arrester which must be periodically cleaned. Refer to the intervals listed in the Maintenance Schedule and clean the spark arrester using the procedure listed below.



#### WARNING

Before service, wait for the muffler to properly cool to avoid possible burns.

1. Remove the three cap screws (1) securing the spark arrester assembly to the muffler; then remove the spark arrester (2) and the gasket (3) from the muffler.
2. Using a suitable brush, clean the carbon deposits from the screen, taking care to not damage the screen.


**NOTE: If the spark arrester screen or gasket is damaged in any way, they must be replaced.**

3. Install the spark arrester assembly and secure with the cap screws. Tighten securely.

## General Maintenance



(1) Cap Screws

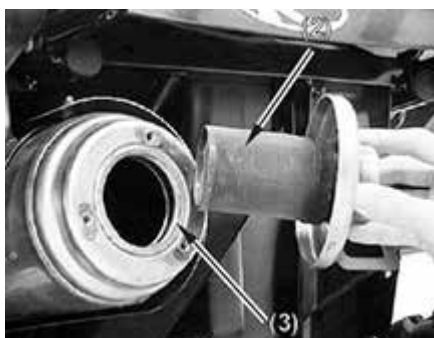

(2) Spark Arrester

(3) Gasket



### WARNING

#### POTENTIAL HAZARD

Improper cleaning of the spark arrester.

#### WHAT CAN HAPPEN

Could injure the eyes.

Could cause burns.

Could cause carbon monoxide poisoning, possibly leading to death.

Could start a thermal event.

#### HOW TO AVOID THE HAZARD

When cleaning the spark arrester:

Always let the exhaust system cool prior to touching exhaust components.

Do not start the engine when cleaning the exhaust system.

## Light Bulb Replacement

The wattage rating of each bulb is listed below. When replacing a burned out bulb, always use the same wattage rating.

Headlight 12V/35W/35W x2

Taillight / Brakelight 12.5V/2.5W (LED), 12.5V/1W (LED)



### CAUTION

Use only bulbs that are specified in this manual as replacement bulbs on this ATV.

## General Maintenance

### Headlight

**NOTE:** The bulb portion of the headlight is fragile. **HANDLE WITH CARE.** When replacing the headlight bulb, do not touch the glass portion of the bulb. If the glass is touched, it must be cleaned with a dry cloth before installing. Oil residue from your skin on the bulb will cause the bulb to fail.

To replace the headlight bulb, use the following procedure:

1. Ensure the key switch is in the "OFF" position.
2. Disconnect the wiring connector from the back of the headlight.
3. Grasp the bulb housing and turn it counter-clockwise to remove the bulb.
4. Install the new bulb into the housing and rotate it clockwise completely.
5. Reinstall the wiring harness connector.



### CAUTION


When replacing the headlight bulb, be careful not to touch the glass portion of the bulb. Grasp the new bulb with a clean cloth.

### Checking / Adjusting Headlight Aim

Headlights can be adjusted vertically and horizontally. The projected center of the HIGH beam should be used for vertical and horizontal aiming.

1. Position the ATV on a flat, level surface so the headlights are approximately 20 ft (6.1 m) from a vertical aiming surface.


**NOTE:** There should be an average operating load on the ATV when adjusting the headlight aim.

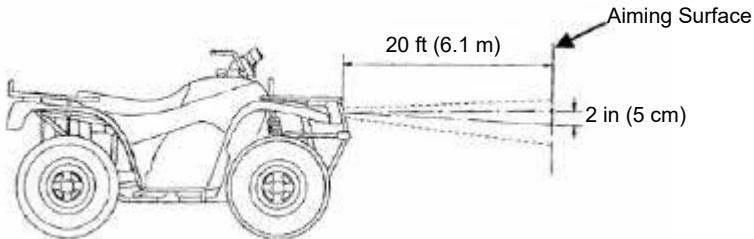

2. Measure the distance from the floor to the center of each headlight.
3. Using the measurements obtained in step 2, make horizontal marks on the aiming surface.
4. Make vertical marks that intersect the horizontal marks on the aiming surface directly in front of the headlights.
5. Switch the ATV lights to the "ON" position. Make sure the HIGH beam switch is on. **DO NOT USE LOW BEAM.**
6. Observe each headlight beam aim. Proper aim is achieved when the most intense beam is centered on the vertical mark 2 in (5 cm) below the horizontal mark on the aiming surface.

## General Maintenance

7. Adjust each headlight until you achieve the correct aim by turning the necessary adjustment screw clockwise or counter-clockwise.

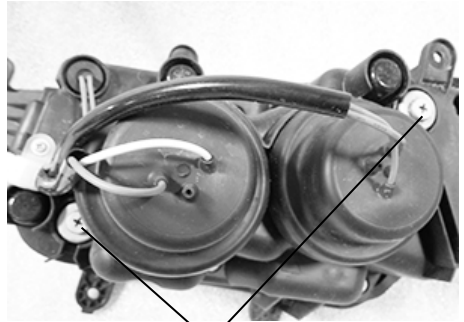

Adjustment Screws

## Taillight / Brakelight

To replace the taillight / brakelight bulb, use the following procedure:

1. Ensure the key switch is in the "OFF" position.
2. Rotate the socket counter-clockwise to remove the assembly from the housing.
3. To remove the bulb from the socket, gently push in and rotate the bulb counter-clockwise.
4. Install the new bulb by gently pushing in and rotate it clockwise.
5. Insert the socket into the housing and rotate it clockwise completely.

## Fuses

The ATV fuses are located in a power distribution module in front of the steering post under the electrical access panel. If there is any type of electrical system failure, always check the fuses first.

**NOTE: To remove a fuse, compress the locking tabs on either side of the fuse cover and lift it out.**



### CAUTION

Always replace a failed fuse with a fuse of the same type and rating. If the new fuse fails after a short period of use, consult an authorized ARGO dealer immediately.



### WARNING

#### POTENTIAL HAZARD

Using an improper fuse.

#### WHAT CAN HAPPEN

An improper fuse can cause damage to the electrical system.

#### HOW TO AVOID THE HAZARD

Always use a fuse of the specified rating. Never use a material in place of the proper fuse.

### NOISE REGULATION

#### TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

“AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW”.

These acts include tampering with the following systems; i.e., modification, removal, etc.

- Exhaust system: Muffler  
Exhaust pipe  
Silencer
- Intake system: Air cleaner case  
Air cleaner element  
Intake duct

## NOTES

## Troubleshooting

### Engine doesn't turn over

Possible Cause	Solution
Failed fuse	Replace the fuse
Low battery voltage	Recharge battery to 12.5 VDC
Loose battery connections	Check all connections and ignition
Loose solenoid connections	Check all connections and ignition

### Engine turns over but fails to start

Possible Cause	Solution
Out of fuel	Refuel
Clogged fuel filter	Inspect, clean or replace
Water is present in fuel	Drain the fuel system and refuel
Fouled or defective spark plug	Inspect plug, replace if necessary
Crankcase filled with water or fuel	Immediately see your dealer
Low battery voltage	Recharge battery to 12.5 VDC
Mechanical failure	See your dealer

### Engine pings or knocks

Possible Cause	Solution
Poor quality or low octane fuel	Replace with recommended fuel
Incorrect ignition timing	See your dealer
Incorrect spark plug gap or heat range	Set gap to specs or replace plug

### Engine backfires

Possible Cause	Solution
Weak spark from spark plug	Inspect, clean and/or replace spark plug
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Old or non-recommended fuel	Replace with new fuel
Incorrectly installed spark plug wire	See your dealer
Incorrect ignition timing	See your dealer
Mechanical failure	See your dealer

### Engine runs irregularly, stalls or misfires

Possible Cause	Solution
Fouled or defective spark plug	Inspect, clean and/or replace spark plug
Worn or defective spark plug wire	See your dealer
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Loose ignition connection	Check all connections and tighten
Water present in fuel	Replace with new fuel



## Troubleshooting

Possible Cause	Solution
<b>Possible lean mixture fuel cause</b>	
Low or contaminated fuel	Add or change fuel, clean fuel system
Low octane fuel	Replace with recommended fuel
<b>Possible rich mixture fuel cause</b>	
Fuel is very high octane	Replace with lower octane fuel
<b>Engine stops or loses power</b>	
Possible Cause	Solution
Out of fuel	Refuel
Kinked or plugged fuel vent line	Inspect and replace
Water present in fuel	Replace with new fuel
Fouled or defective spark plug	Inspect, clean and/or replace spark plug
Worn or defective spark plug wire	See your dealer
Incorrect spark plug gap or heat range	Set gap to specs or replace plug
Loose ignition connection	Check all connections and tighten
Low battery voltage	Recharge battery to 12.5 VDC
Incorrect fuel	Replace with recommended fuel
Clogged air filter	Inspect, clean or replace
Other mechanical failure	See your dealer
Overheated engine	Clean engine exterior See your dealer

## SECTION 9

### Preparation For Storage



#### CAUTION

Prior to storing your ATV, it must be properly serviced to prevent rusting and component deterioration.

#### Cleaning the Vehicle

Frequent, thorough cleaning of your ATV will not only enhance its appearance but will improve its general performance and extend the useful life of many components.

1. Before cleaning the ATV:
  - a. Block off the end of the exhaust pipe to prevent water entry. A plastic bag and strong rubber band may be used.
  - b. Make sure the spark plug and all filler caps are properly installed.
2. If the engine case is excessively greasy, apply degreaser with a paintbrush. Do not apply degreaser to wheel axles.
3. Rinse the dirt and degreaser off with a garden hose. Use only enough pressure to do the job.



#### WARNING

- Wet brakes may have reduced stopping ability, increasing the chance of an accident. Test the brakes after washing. Apply the brakes several times at slow speeds to let friction dry out the components.
- Excessive water pressure may cause water seepage and deterioration of wheel bearing, brakes, transmission seals and electrical devices. Many expensive repair bills have resulted from improper high-pressure detergent applications such as those available in coin-operated car washes.

4. Once most of the dirt has been hosed off, wash all surfaces with warm water and mild, detergent-type soap. An old toothbrush or bottle brush is handy for hard to reach places.
5. Rinse the ATV off immediately with clean water and dry all surfaces with a chamois, clean towel or soft absorbing cloth.
6. Clean the seat with vinyl upholstery cleaner to keep the cover pliable and glossy.
7. Automotive type wax may be applied to all painted and chrome plated surfaces. Avoid combination cleaner-waxes. Many contain abrasives, which may mar the paint or protective finish. When finished cleaning, start the engine and let it idle for several minutes.

## Storage

### Short Term

Always store your ATV in a cool, dry place and if necessary, protect it against dust with a porous cover.



### **WARNING**

Storing the ATV in a poorly ventilated room or covering it with a tarp while it is still wet, will allow water and humidity to seep in and cause rust. To prevent corrosion, avoid damp cellars, stables and area where strong chemicals are stored.

### Long Term

Before storing your ATV for several months:

1. Follow all the instructions in the “Cleaning” section of this chapter.
2. Fill up the fuel tank and add fuel stabilizer to prevent the fuel from deteriorating.
3. Perform the following steps to protect the cylinder, piston rings, etc. from corrosion.
  - a. Remove the spark plug cap and spark plug.
  - b. Pour a teaspoonful of engine oil into the spark plug bore.
  - c. Install the spark plug cap onto the spark plug and then place the spark plug on the cylinder head so that the electrodes are grounded.
  - d. Turn the engine over several times with the starter.
  - e. Remove the spark plug cap from the spark plug and then install the spark plug and the spark plug cap.
4. Lubricate all control cables and the pivoting points of all levers and pedals.
5. Check and if necessary, correct the tire air pressure and then block up the ATV so that all of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
6. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
7. Remove the battery and fully charge it. Store it in a cool, dry place and charge it once a month.

Do not store the battery in an excessively cold or warm place less than 32° F (0° C) or more than 86° F (30° C).
8. Make necessary repairs before storing the ATV.

## SECTION 10

### Warranty



#### **LIMITED WARRANTY**

Ontario Drive & Gear Limited (hereinafter "ARGO") extends a limited warranty on each new ARGO ATV, XTV, and SSV and on each genuine ARGO part and accessory sold by an authorized ARGO dealer. The limited warranty on an ARGO ATV, XTV, or SSV is provided to the original retail purchaser; however, the balance of the unused warranty may be transferred to another party through an ARGO dealer, but any such transfer will not extend the original term of the warranty. Warranty coverage is limited to the country in which the original retail purchase occurs and to the original retail purchaser resident in that country or, if transferred to a resident in that country for the balance of the remaining warranty.

The warranty is validated upon examination of said parts by ARGO or an authorized ARGO dealer. ARGO reserves the right to inspect such parts at its factory for final determination if warranty should apply. ARGO will repair or replace, at its option (including any related labor charges), any parts that are found to be warrantable in material or workmanship. This repair work must be done by an authorized ARGO dealer. No transportation charges, rental charges, or inconvenience costs will be paid by ARGO.

ARGO does not assume any liability for incidental or consequential damages.

#### **WARRANTY COVERAGE PERIOD**

1. Standard Warranty - 1 year from the date of sale.

Argo Promotional Extended Warranty provided at the time of sale will follow the Standard Warranty guidelines and coverage. Excludes batteries.

The warranty does not cover normal wear, abuse, or corrosion.

#### **WARRANTY LIMITATIONS AND EXCLUSIONS**

This ARGO limited warranty will become null and void if:

1. Failure to perform the proper break-in procedure and all related maintenance, storage procedures (if stored for extended periods), and/or service as recommended in the Operator's Manual.
2. Repairs and/or adjustments made by anyone other than an authorized ARGO dealer unless instructed by ARGO.
3. Any modification, addition, or removal of parts unless instructed to do so by ARGO.
4. Removal of the engine for use in another vehicle.
5. Use of improper fuels, lubricating oils, or spark plug(s).
6. Vehicle has been involved in an accident or subject to misuse, abuse, or negligent operation, including overloading.
7. Use of the vehicle in any way for racing purposes.
8. Removal or mutilation of the Product Identification Number or Engine Serial Number.
9. Damage due to improper transportation.
10. Use of aftermarket or unapproved parts, accessories or attachments not sold by ARGO.



11. Damage caused by Acts of God, such as storm damage, hail, lightning, and other environmental conditions.
12. Collision, fire, theft, freezing, vandalism, riot, explosion, or objects striking the vehicle.
13. Tampering with the vehicle's hour meter.

In consideration of the foregoing, any implied warranty is limited in duration to the warranty periods set forth. This warranty gives you specific legal rights, and you may also have other rights which vary from state/province to state/province and country to country. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

### **WARRANTY PROCEDURE / OWNER RESPONSIBILITY**

At the time of sale, a Training Certificate (if applicable) or an Owner Registration form is to be completed by the selling dealer and consumer. The receipt of the form by ARGO is a condition precedent to warranty coverage. It is the selling dealer's responsibility to retain and/or submit appropriate electronic registration to initiate warranty coverage.

The selling dealer is responsible to furnish the consumer a signed copy of the form which must be presented to the dealer when requesting warranty service. The registration form is the consumer's proof of ownership and warranty eligibility. The form is to be used by the dealer to validate the warranty claim. Retain your copy of the Owner Registration form and keep it in a safe place.

When warranty repair is suspected, the vehicle should be taken to an authorized ARGO dealer, who has the primary responsibility to perform warranty repairs.

The authorized ARGO dealer will examine the vehicle or part to determine if a warrantable condition exists. If a warrantable condition appears to exist, the dealer will repair or replace, at ARGO's option, including any related labor costs, all parts that are found to be warrantable and any other parts which the warrantable part caused to be damaged.

It is the owner's responsibility to maintain and service the vehicle in accordance with ARGO's recommendations in the Operator's Manual. To protect yourself and your vehicle, follow all safety and service tips. ARGO will NOT warrant repairs required as a result of not performing standard operator maintenance, storage procedures, and service as outlined in the Operator's Manual.

Should you have any questions concerning the warranty, contact an authorized ARGO dealer.

## **EPA EMISSIONS CONTROL SYSTEM WARRANTY:**

### **LIMITED WARRANTIES EMISSION CONTROL SYSTEMS:**

ARGO warrants to the owner of any 2025 and subsequent model year ATV that the ATV is designed, built and equipped to conform at the time of sale with all applicable emission standards and is free from defects in materials and workmanship which would cause it to fail to conform with applicable requirements during the specified time and mileage limits.

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall and all other services paid or by ARGO must be performed at an authorized ARGO service center except for the emergency condition described below.

### **Your Warranty Rights and Obligations:**

In the United States and Canada, new ATVs must be designed, built and equipped to meet stringent Federal anti-smog standards. ARGO must warrant the emissions control system on your ATV for the periods of time listed below, provided there has been no abuse, neglect or improper maintenance of your ATV. Your emissions control system may include parts such as the sensors, the ignition and the engine computer. Also included may be hoses, connectors and other emissions-related assemblies. Where a warrantable condition exists, ARGO will repair your ATV at no cost to you, including diagnosis, parts, and labor.

### **Owner's Responsibility:**

As the ATV owner, you should also be aware that ARGO may deny you warranty coverage if your vehicle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications. If you have any questions regarding your warranty rights and responsibilities or if an authorized ARGO dealer cannot repair your ATV or honor your claim within a reasonable period of time, contact ARGO or assistance at 1-218-683- 5366. If you are not satisfied with the way in which a warranty claim is resolved by ARGO, you may write directly to:

Director, Gasoline Engine Compliance Center  
Compliance Division  
U.S. EPA  
2000 Traverwood Drive  
Ann Arbor, MI 48105

You must operate and maintain your ATV according to the requirements of the Operator's Manual including the maintenance schedule. This schedule is designed to keep your ATV emission control systems functioning properly and safely. You should keep receipts and records of maintenance and service but ARGO will not deny a warranty claim solely because of lack of maintenance records.

If an ARGO service center is not available within 100 miles, ARGO will reimburse you for those emergency repairs, including diagnosis, covered by the Emissions Warranties. Labor reimbursement is at a geographically-appropriate hourly labor rate for ARGO recommended time allowance. For reimbursement, present the replacement parts and a copy of the paid receipt to ARGO.

The use of replacement parts not equivalent to the original parts may impair the effectiveness of your ATV emissions control systems. If such a replacement part is used in the maintenance or repair of your ATV and an authorized ARGO dealer determines it is defective or caused a failure of a warranted part, your claim for repair to bring your ATV into compliance with applicable standards may be denied. If the part in question is not related to the reason your ATV fails to meet the standards, your claim will not be denied.

**Emissions Warranty Coverage:**

This warranty begins on the date the ATV is delivered to the first purchaser, or the date it is first used as a demonstrator, lease, or company ATV, whichever comes first and continues for the time and mileage listed below:

Time: 30 months OR

Mileage: 5,000 kilometers (3,100 miles) whichever comes first.

**Warranted Parts:**

Fuel Tank  
Fuel Cap  
Fuel Line  
Fuel Line Fittings  
Clamps\*  
Carburetor  
Press. Relief Valves\*  
Control Valves\*  
Control Solenoids\*  
Electronic Controls\*  
Control Cables\*  
Control Linkages\*  
Purge Valves  
Vapor Hoses  
Liq/Vapor Separator  
Air Intake System  
Press Relief Fittings\*  
Vacuum Control Diaphragms\*  
Engine  
Engine Electronic Control Module\*  
Ignition System\*  
Sensors\*  
Exhaust System and Components  
Spark Arrestor  
Fuel Injection System and Components

\*Components that are part of the engine, fuel injection system, fuel evaporative system and emissions control system.

# Maintenance Record

MAINTENANCE INTERVAL	DATE OF SERVICE	MILEAGE	SERVICING DEALER NAME AND ADDRESS	REMARKS
1 Month				
3 Months				
6 Months				
12 Months				
18 Months				
24 Months				
30 Months				
36 Months				
42 Months				
48 Months				
54 Months				
60 Months				







## WARNING

Improper ATV use can result in SEVERE INJURY or DEATH.



**ALWAYS USE  
AN APPROVED  
HELMET AND  
PROTECTIVE  
GEAR**



**NEVER USE  
ON PUBLIC  
ROADS**



**NEVER CARRY  
PASSENGERS**



**NEVER USE  
WITH DRUGS  
OR ALCOHOL**

### **NEVER operate:**

- without proper training or instruction.
- at speeds too fast for your skills or the conditions.
- on public roads - a collision can occur with another vehicle.
- with a passenger - passengers affect balance and steering and increase risk of losing control.

### **ALWAYS:**

- use proper riding techniques to avoid vehicle overturns on hills and rough terrain and in turns.
- avoid paved surfaces - pavement may seriously affect handling and control.

**LOCATE AND READ OWNER'S MANUAL.  
FOLLOW ALL INSTRUCTIONS AND WARNINGS.**